

***TELIKOU* Audio Monitor**

**MIX-8 Balanced Stereo Audio Mixer
User Manual**

© 2006 TELIKOU Systems
All Rights Reserved

I. Basic Operation



Microphone signal input:

- Six balanced input signal
- Independent gain adjustment
- Each channel controllable 48V Phantom Power
- 6.35mm and XLR-3F compatible connector

Line Signal input:

- Two channel stereo unbalanced signal
- Synchronously L & R input level adjustment
- RAC connector

Output Signal:

- Two or One stereo balanced audio output
- VU level meter
- L & R output level synchronously adjustment
- Two 6.35mm and two XLR-3M connector