

HDMI (HDBaseT) Matrix Switcher Series

ITEM NO.: HE04M 4 x 4 HDMI (HDBaseT) Matrix Switcher

With the latest and more affordable HDBaseT technology extend HDMI sources up to 100M at 1080p or 1920x1200. HE04M HDMI 4 by 4 Matrix Switcher allows for effortless control of up to 4 devices through IR remote control, RS-232 and the front panel.



HE04M 4 x 4 HDMI (HDBaseT) Matrix Switcher

- ◆ 4 x HDMI inputs , 4 x HDMI Outputs Matrix switcher
- ◆ Dual Output: local HDMI port or remote RJ45 termination
- ◆ Work with HE02ER, HE02R receiver at each monitor up to 100 meters over CAT5e/6.
- ◆ Work with HE02EIR receiver at each monitor up to 70 meters over CAT6a cable.
- ◆ Three control option: Front panel button, IR remote control, RS232 through remote PC.
- ◆ Support local/remote IR control to select input/output.
- ◆ Built in RS232 console port to select input/output.
- ◆ **Built 1 in 4 out IR distributor function, allow the HE04M control each monitor and also could be using the IR remote control to select the input source from the monitor side.**
- ◆ Uncompressed high definition video 1080p@60Hz 12 bit and 3D capable
- ◆ HDMI 1.4 video features supported, HDCP compliant.
- ◆ Built in 4 channel IR & RS232 extender (work with Receiver: HE02EIR, HE02ER,)
- ◆ Input/Output status could be displayed at front panel LCM & LED.

◆ Optional Model:

RC04 : 4 x 4 Keypad remote control (select HE04M input/output)




◆ Optional CAT5E/CAT6 Receiver Model:


- HE02ER: 100m HDMI Receiver
- HE02R : 100m HDMI, IR and RS232 Receiver
- HE02EIR: 70m HDMI with IR Receiver



HE04M Panel View:

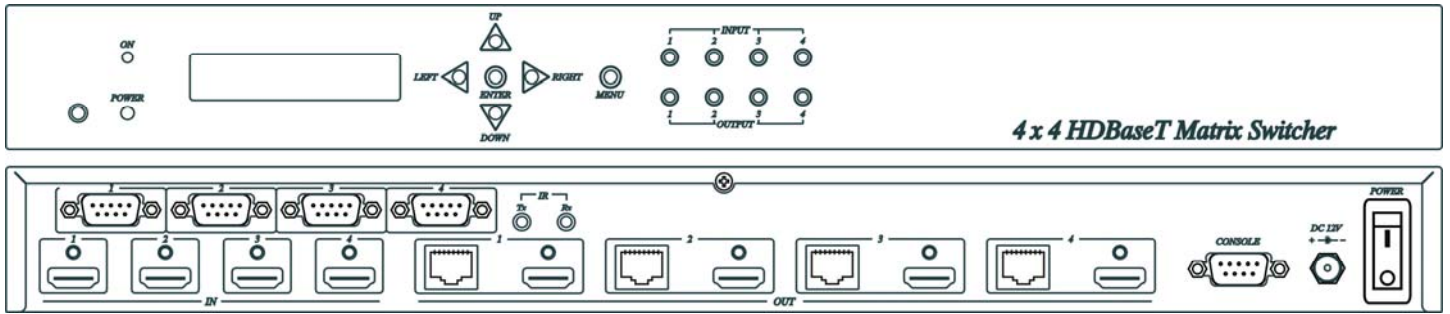

HE04M Connection View:

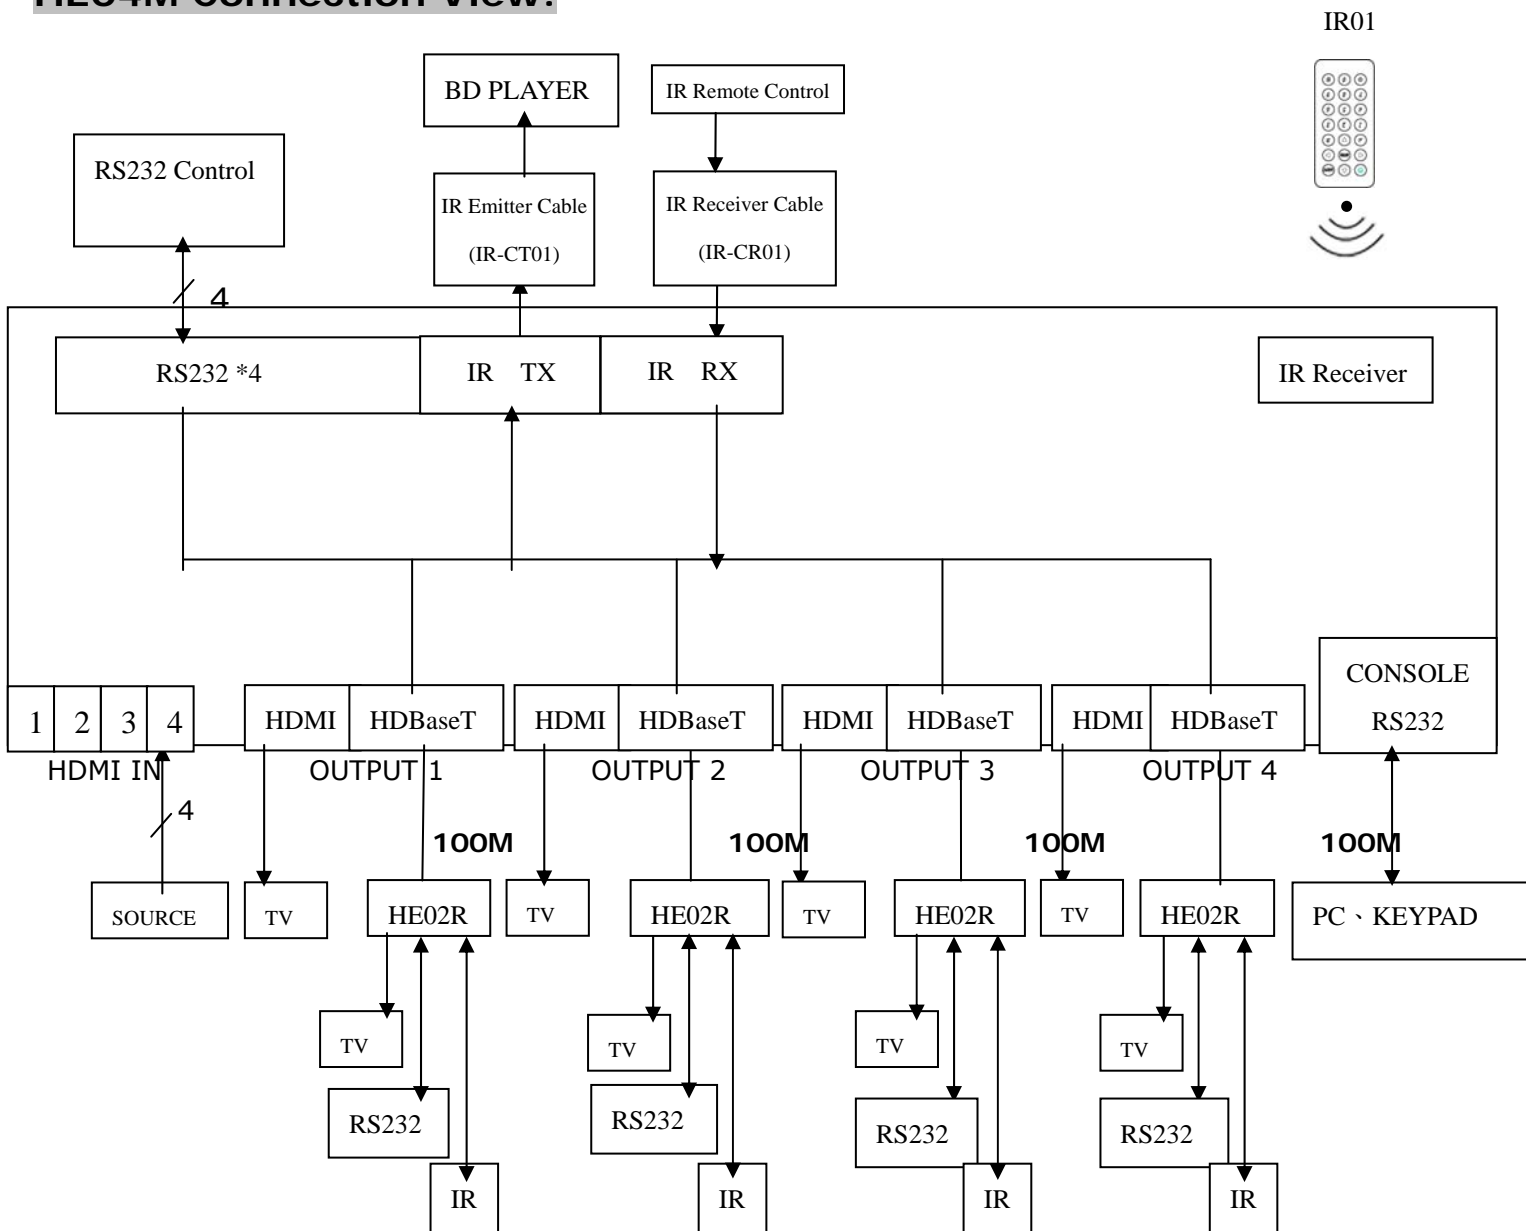

* Under dual Output connection: local HDMI port or remote RJ45 termination
 Once you link both HDMI & HDBaseT connection, the output will be effected HDMI port only.
 For HDBaseT output must disconnection HDMI link.

Back Panel Switch:

POWER	LED on	Power on
	LED off	Power off

Front LED Indication:

ON	BLUE	Power on
	RED	Standby
	LED off	Power Off
INPUT 1, 2, 3, 4	BLUE	Input Indication
	LED off	SOURCE no signal
OUTPUT 1, 2, 3, 4	BLUE	HDMI output indications
	RED	HDBaseT output indication
	LED off	Output unlink

- **Standby mode: The IR Remote only could control POWER on/off.**

Front Button Function:

Power	Power on/standby
UP	up
DOWN	down
LEFT	left
RIGHT	right
ENTER	select confirm key
MENU	back to main menu

*When the sub-menu setting changed, press the ENTER key to complete the setting. If no press ENTER key, then the setting will be failed.

LCM Panel Function:

4X4 HDMI MATRIX: Power on Main Screen

* When the power on the main screen appears, press the MENU key to enter the main menu

Main MENU Option:

- * SWITCH SETTING
- RS232 SETTING
- IR TX SETTING
- IR RX SETTING
- HDBaseT IR ID
- MATRIX IR ID
- EDID
- FIRMWARE VER.
- KEYLOCK

Operation:



- Press UP or DOWN key to move * to select an item for setting and press ENTER key into subpage.
- When the selected sub-page setting is completed, press the MENU button to return to the main page


LCM Main MENU Function Operation: SWITCH SETTING : (Default: 1 2 3 4)

OUTPUT	1	2	3	4
INPUT	1	2	3	4

This function is used to switch the input/output port, enter the SWITCH SETTING menu. To press the ENTER key, then the LCM second line INPUT 1 will flash, to press UP or Down button to select the input port, to press LEFT or RIGHT button to select the modified output, after that press ENTER to confirm setting.

At HDBaseT port could use IR01 remote control to do a quick input selection

① ~ ④ represent select HDMI input ports 1~4. Press  or  turn off the video output.

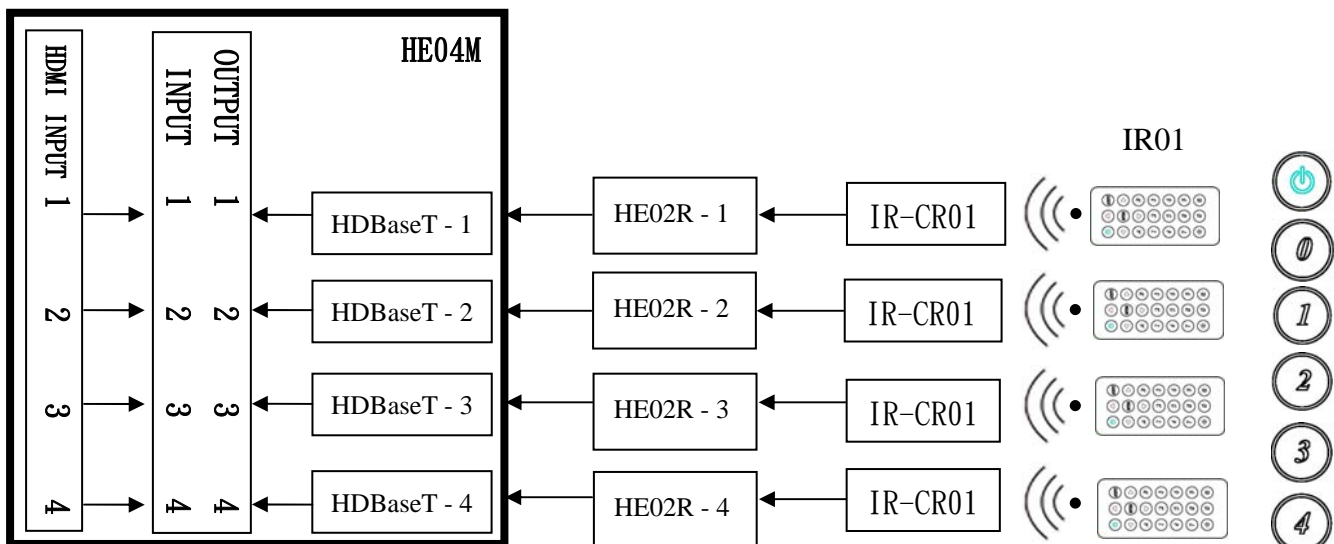


RS-232 SETTING : (Default: FIX MODE)

HDBaseT RS-232 extender function with two mode, enter RS-232 SETTING MENU, press ENTER, the * will flash, then press UP or DOWN button to select FIX MODE or MATRIX MODE, press ENTER key to confirm setting.

- ◆ FIX MODE is one to one transmission, RS-232 port 1 only work with HDBaseT port 1, RS-232 port 2 only work with HDBaseT port 2, and so on...


* FIX MODE
MATRIX MODE

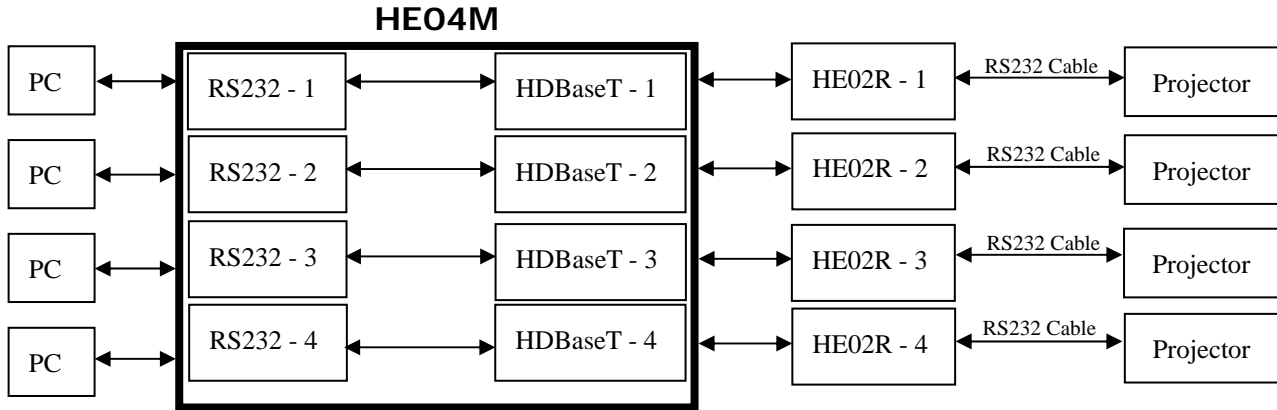

RS-232 SETTING : FIX MODE

- ◆ RS-232 MATRIX MODE based on SWITCH SETTING to do RS-232 transmission, RS-232 port 1 work with HDMI input 1, RS-232 port 2 work with HDMI 2 and so on...

FIX MODE
* MATRIX MODE

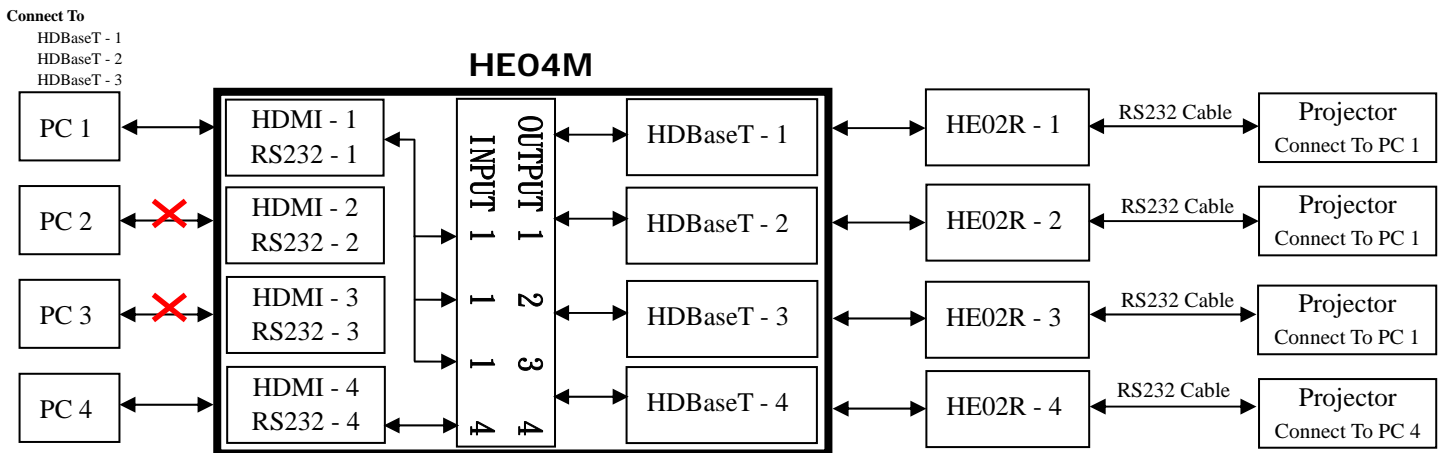

RS-232 SETTING : MATRIX MODE


IR TX SETTING : (Default IR TX: 0 0 0 0)

This function could setup the IR signal whether from MATRIX sent to HDBaseT port. To control remote device, setting 0 is on, X is off.

After entering IR TX SETTING menu, press ENTER, then LCM second line of text will flash, to press UP or DOWN button to select 0 or X, press ENTER to confirm setting.

HDBaseT	1	2	3	4
IR TX	0	X	0	X

0 : on X : off

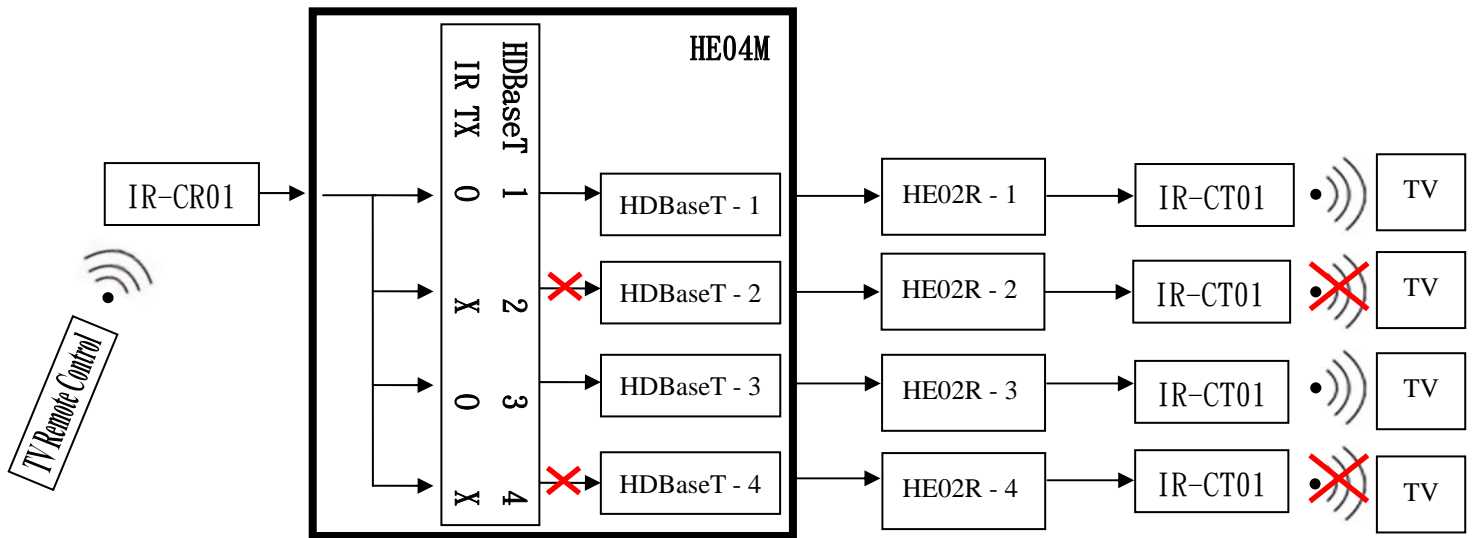


IR RX SETTING : (Default IR RX: 0 0 0 0)

This function could setup the IR signal whether from HDBaseT sent to MATRIX to control local device, O is on, X is off.

After entering IR RX SETTING menu, press ENTER, then LCM second line of text will flash, to press UP or DOWN button to select O or X, press ENTER to confirm setting.

HDBaseT	1	2	3	4
IR RX	0	X	0	X

O : on X : off

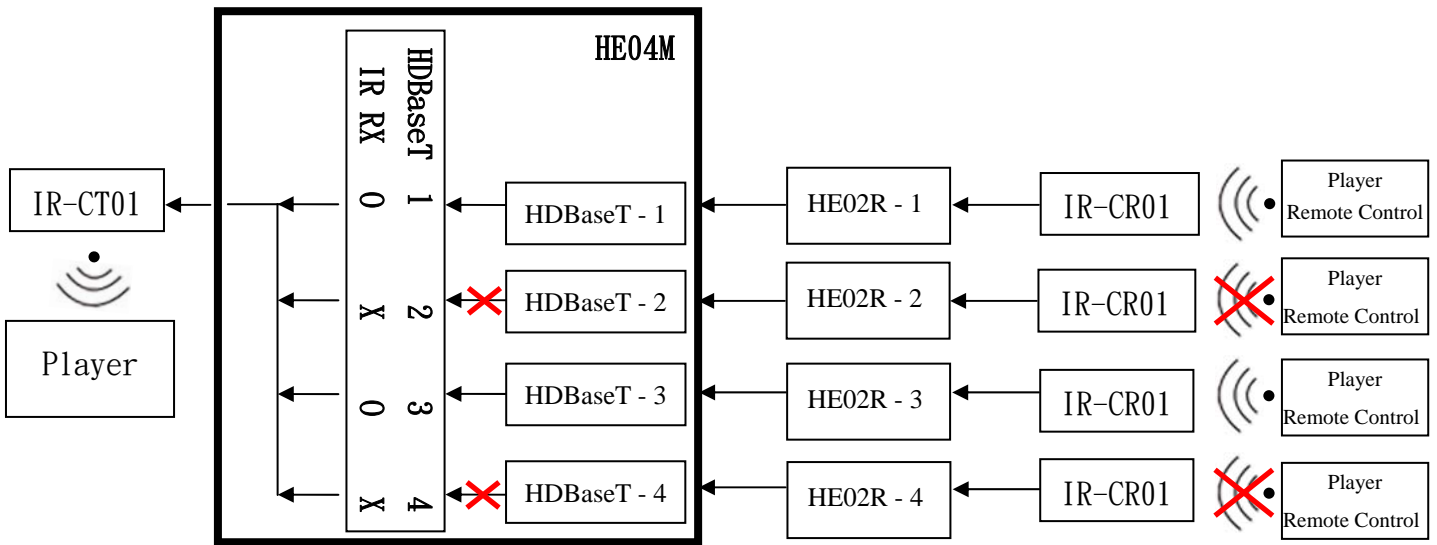

HDBaseT IR ID : (Default IR ID: 5 5 5 5)

HDBaseT	1	2	3	4
IR ID	0	1	2	3


This function could be set to different ID to avoid HDBaseT remote control (IR01) conflicts with other devices remote control.

After entering HDBaseT IR ID menu, press ENTER, then LCM second line of text will flash, to press UP or DOWN button to select, press ENTER to confirm setting.

When finish HDBaseT IR ID setting, HDBaseT remote control (IR01) must also set the same ID in order to operation in normal.

Remote IR ID setting mode: To press and hold the POWER button, then press the number button which can be set from 0 to 9, total 10 groups.

★ First time to use the remote control or replace new batteries of remote control need to re-set the remote control IR ID.

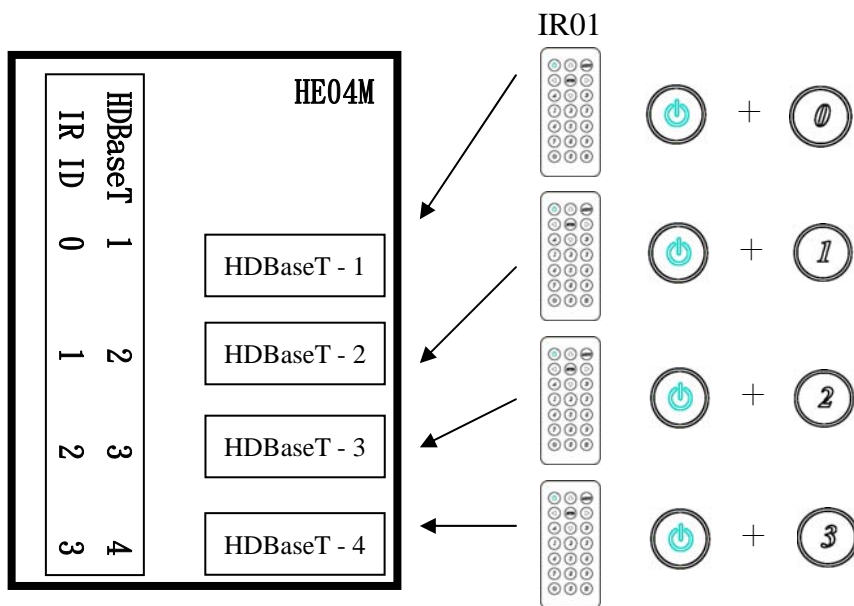

MATRIX IR ID : (Default IR ID: 4)

MATRIX IR ID 4


This function could be set to different ID to avoid Matrix remote control (IR01) conflicts with other devices remote control.

After entering MATRIX IR ID menu, press ENTER, then LCM second line of text will flash, to press UP or DOWN button to select, press ENTER to confirm setting.

When finish MATRIX IR ID setting, MATRIX remote control (IR01) must also set the same ID in order to operation in normal.


Remote Control IR ID setting mode: To press and hold the POWER button, then press the Number buttons which can be set from 0 to 9, total 10 groups.

★ First time to use the remote control or replace new batteries of remote control need to re-set the remote control IR ID.

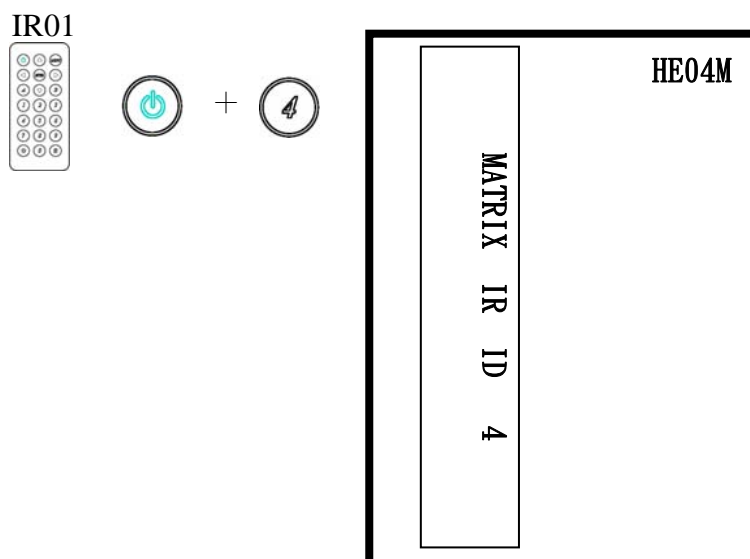



EDID : (Default: LPCM-2CH)

 Because the player output display resolution will be based on TV EDID , this Matrix provides two default EDID mode: " BUILD-IN MODE" and "COPY MODE".



BUILD-IN MODE :


 
This mode supports video resolution 480p, 720p, 1080i / p @ 24/50/60Hz, support LPCM two-channel audio and 5.1 channel . After enter BUILD-IN MODE menu, press UP or DOWN key to select LPCM-2CH or LPCM-5.1CH, press ENTER to confirm setting.

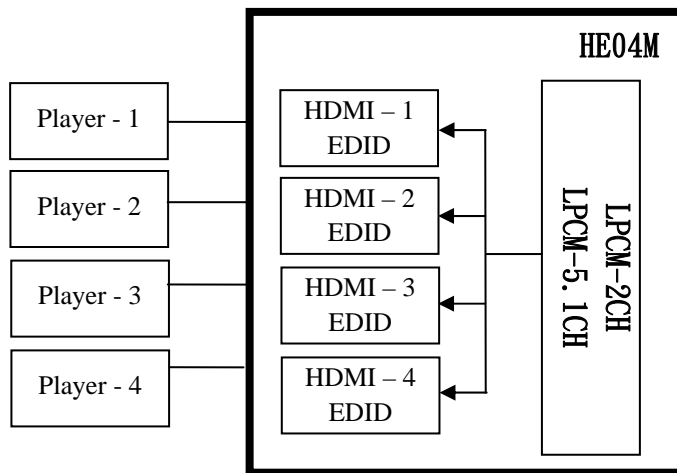

COPY MODE :

To fully support the TV resolution and audio mode, the matrix provided copy mode to copy TV EDID for input source reference. When use the copy mode, recommend to copy the lowest resolution TV EDID. Otherwise it may cause no picture display if the TV resolution not able to support the higher resolution.

 After entering COPY MODE menu, press UP or DOWN button and then select From OUTPUT to INPUT. After setting, press ENTER to confirm.

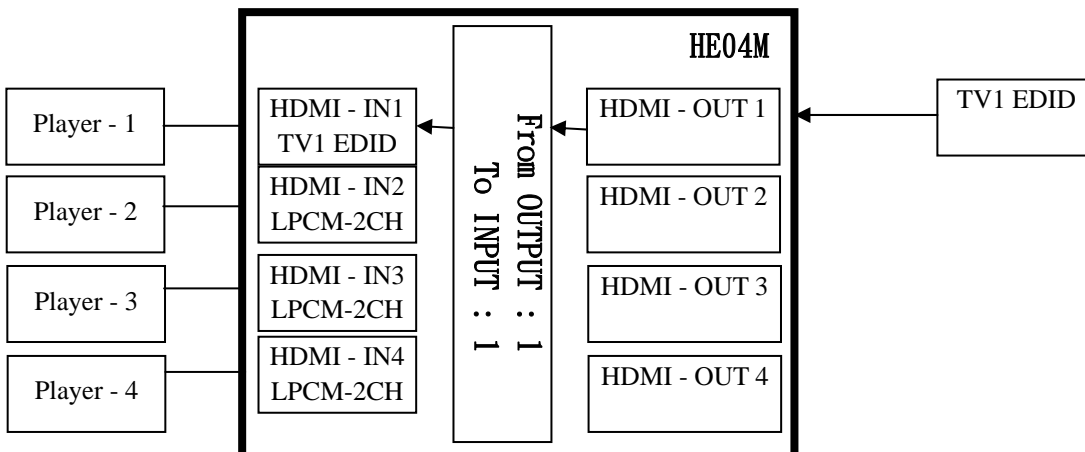


FIRMWARE VER. :

Display HE04M Matrix firmware version

KEYLOCK :

KEYLOCK function is to avoid any wrong button press. Under keylock mode press "POWER + MENU" to unlock



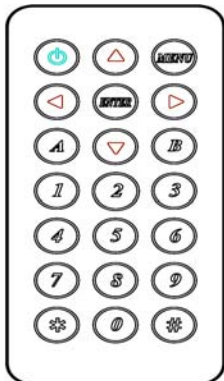









Remote Control Function (IR01):



Setup the remote control IR ID same as the this Matrix, first time to use the remote control or replace new batteries of remote control need to re-set the remote control IR ID.

- Local side(HE04M Matrix) IR ID default is 4
- Remote side(HDBaseT) IR ID default is 0
- To avoid the remote control conflicts with other devices remote control, please use HDBaseT/MATRIX IR ID SETTING to set the IR ID.
- IR remove control ID setup : press and hold POWER button , then press Number keys

Remote control button define :

Symbol	Local Side	Remote Side	
	Power	ON/Standby(same as Matrix)	off output
	LEFT	left(same as Matrix)	no function
	RIGHT	right(same as Matrix)	no function
	UP	up(same as Matrix)	no function
	DOWN	down(same as Matrix)	no function
	ENTER	confirm (same as Matrix)	no function
	MENU	menu(same as Matrix)	no function
	Quick key1		select input 1
	Quick key2		select input 2
	Quick key3		select input3
	Quick key4		select input4
	no function		no function



no function

no function

no function

no function

no function

no function

no function

no function

turn off output

turn off output

Local side (HE04M Matrix) Remote control Quick key operation:

For example: the output port 1 connect to output port 4 , press the quick key 1 (OUTPUT 1) and then press the quick key 4 (INPUT 4).

Remote side (HDBaseT) remote control quick key operation: press 1 – 4 to select source input, press 0 to turn off the output.

* Under using quick key operation, LCM screen will jump to the output / input setting page, it won't allow to use the front panel button to operate the HE04M Matrix.

Computer Local Control Function : (CONSOLE)

CONSOLE



This Matrix communication format is 9600,8, N, 1 (9600 bps, 8 data bits, no parity check, 1 stop bit)

Operation Instruction format:

Command + Space + parameters + Enter

TX[x] [y] output x port switch to input y port

PWR [z]

[SYMBOL]

[PARAMETER]

x	1 2 3 4	Output 1~4
y	01 02 03 04 00	Input 1~4, 00: Off
z	00 01	00: Standby, 01: On

Example:

TX1 04 Output 1 switch to input 4

PWR 01 turn off

* The Matrix will reply OK message once correct input, wrong input will reply NG message.


RS-232 Extender function : (Default: FIX MODE)



*Cable connection please refer to the connection view page.

* Transmission baud rate up to 115200 bps.

Remote side IR Extender Function:

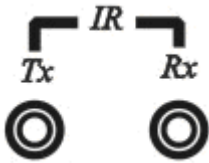

◆ Tx Function:

Receiving IR signal from 4 sets HDBaseT ports, send out the signal by Tx (connect with 3.5ψ IR Emitter) to control source devices.

◆ Rx Function :

Receiving IR signal from Rx (connect 3.5ψ IR Receiver cable) to control remote monitors at 4 sets HDBaseT ports at the same time.

HDBaseT IR Function:

1. Use IR01 (remote control) to control the Matrix input port switching from receiver side. (Work with IR-CR01 IR receiver cable)
- 2 . Using remote control of source device or TV, to control source device or TV. (Work with IR-CT01 IR emitter cable, IR-CR01 IR receiver cable).


HDBaseT linking cable:

Recommend to use high quality Cat.5e 、 Cat.6 、 Cat.6a UTP / STP or FTP cable.

HDBaseT transmission distance:

Transmission distances up to 100 meters, using a lower resolution won't extend to longer distance.

If the CAT5e/6 cable connections go through wall socket from the wall outlet to HE02R receiver, the cable length must less 5 meters between HE02R receiver and wall socket. The wiring diagram as below:

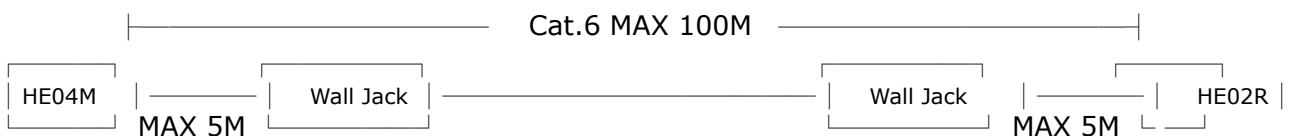

HDBaseT RJ45 Pin Define:

Video Link (TIA/EIA-568-B)

- 1. Orange-white DATA0 +
- 2. Orange DATA0 -
- 3. Green-white DATA1 +
- 4. Blue DATA2 +
- 5. Blue-white DATA2 -
- 6. Green DATA1 -
- 7. Brown-white DATA3 +
- 8. Brown DATA3 -

Caution:


- 1. First time to use HE04M remote control or change new batteries, must set up IR ID.
- 2. The wiring must away from any equipment with electromagnetic wave, i.e.: microwave, mobile phone, radio equipment, high voltage, Fluorescent light fixtures, power lines, etc.
- 3. HDBaseT not regular network device, do not connect with any networking equipments to avoid damage.

HE04M Standard Package Include:

- HE04M Matrix x 1 pcs
- IR01 IR Remote Control x 1 pcs
- Power Adapter x 1 pcs


HE04MEK Package Include:

- HE04M Matrix x 1 pcs
- HE02R HDMI Receiver x 4 pcs
- IR01 IR Remote Control x 5 pcs
- Power Adapter x 5 pcs

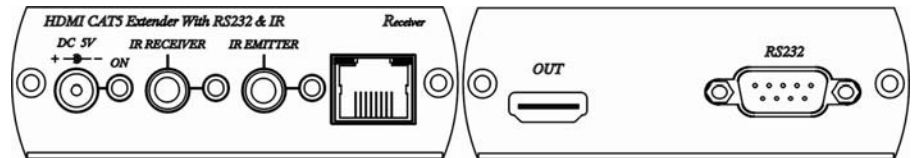


HE04MEK Package Include:

- HE04M Matrix x 1 pcs
- HE02ER HDMI Receiver x 4 pcs
- IR01 IR Remote Control x 1 pcs
- Power Adapter x 5 pcs

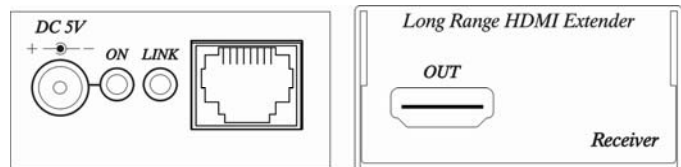

HE04MEIK Package Include:

- HE04M Matrix x 1 pcs
- HE02EIR HDMI Receiver x 4 pcs
- IR01 IR Remote Control x 5 pcs
- IR Emitter Cable x 4 pcs
- IR Receiver Cable x 4 pcs
- Power Adapter x 5 pcs

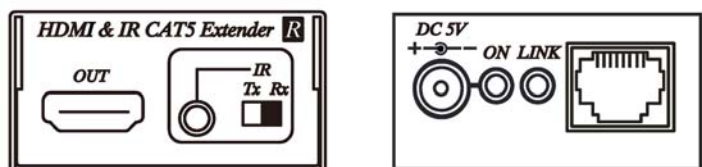

Specification:

Item No.	HE04M	
HDMI Input Max. Resolution	1080p @ 60Hz 12bi, 3D	
Video Input	HDMI Type A x 4	
HDBaseT RJ45 output Max. Resolution	1080p at 60Hz 12bit	
HDBaseT Max. Distance	100 Meters	
Video Output	HDMI Type A x 4 and RJ45 x4	
HDBaseT RJ45 output Max Distance	100 meters	
IR Input/Output	Phone Jack x 2	
HDBaseT IR Carrier Frequency	30-60Khz	
HDBaseT IR Angle	Tx : ±30d degree , Rx : ±55 degree	
HDBaseT IR Distance	5m	
HE04M IR Receive Angle	±45 degree	
HE04M IR Receive Distance	5M	
RS232 Input/Output	DB9 x 5	
Power Adapter	DC 12V 4.2 Amp	
Power Consumption	2.6 Amp (Max)	
Temperature	Operation: 0 to 55°C, Storage: -20 to 85°C, Humidity: up to 95%	
Dimension	mm	483 x 197 x 44
Weight	kg	2400

ITEM NO.	HE02R (HE04MK Kit receiver, Optional CAT5E Receiver)	
Resolution	Up to 1080p / 60Hz / 48 bit	
Distance	100M (Max)	
HDMI Connector	Type A	
RS-232 Baud Rate	Up to 115200 bps / Full Duplex	
RS-232 Connector	DB9 Male	
IR Carrier	30-60Khz / ±10° / 5M / 2 Way	
Power Supply	DC 5V 2AMP Regulated	
Power Consumption	1200mA (Max)	
Temperature	Operation: 0 to 55°C, Storage: -20 TO 85°C, Humidity: up to 95%	
Dimensions	88 x 130 x 30	
Weight	270	

Item No.	HE02ER (HE04MEK Kit receiver, Optional CAT5E Receiver)	HE02EIR (HE04MEIK Kit receiver, Optional CAT5E Receiver)
Resolution	Up to 1080p / 60Hz / 12 bit	
Distance	100 m (Max)	50 m by CAT5e/6, 70 m by CAT6a
Video Output	HDMI Type A x 1	
IR Carrier Frequency	X	30-60KHz
IR Angle	X	±55
IR Distance	X	5m
Power Supply	Regulated DC5V 2A	
Power Consumption	1200mA (Max)	820mA (Max)
Temperature	Operation: 0 to 55°C, Storage: -20 TO 85°C, Humidity: up to 95%	
Dimensions	mm	49 x 92.3 x 25
Weight	g	135