
Digital Video Recorder

User's Manual

DHR-042C

DHR-082C

DHR-168R

Thank you for using our product.

1. This is user's manual for DVR(Digital Video Recorder).
2. This manual contains product specification and introduction, installation guide, operating guide and other necessary matters for easy understanding. Users should read this user's manual carefully for proper use.
3. Contents in this manual may be changed according to the specification change and feature improvement without any notification.
4. This user's manual shall never be copied without prior agreement and violating this may be a reason for legal punishment on piracy.
5. If there is any incorrect or insufficient content in this user's manual, notify it to Customer Support Center.

Contents**CH 1. Product Introduction`**

1-1. Product Contents	4
1-2. Product Characteristics	5
1-3. Name of Each Part	8

CH 2. Installation Guide and Cautions

2-1. Cautions	13
2-2. Product Installation	16
2-2-1. Power Connection	16
2-2-2. Connecting External Device	16

CH 3. How to Use

3-1. General Usage Information	19
3-2. Live Mode	20
3-2-1. Live mode control	20
3-2-2. Live mode feature	22
3-3. Search Mode	30
3-3-1. Search selection type	30
3-3-2. Play Mode	34
3-4. Setup Mode	35
3-4-1. Display	36
3-4-2. Record	41
3-4-3. Device	46
3-4-4. Network	65
3-4-5. System	73
3-5. Firmware Upgrade	79

Trouble Shooting	81
-------------------------	-----------

CH1. Product Introduction

1-1. Product Contents (04CH / 08CH)

After removing packing materials of this product, check whether all following contents are included.



Main Body (DVR):

This converts the analog video and audio signal to the digital signal and saves on HDD.



Adapter:

This 12V adapter supplies power for 4, 8ch DVR.



Power Cable:

This connect the adapter and the power source.



MOUSE:

This is an controller for convenience.



Program CD:

This contains the User's manual and Client Program for DVR.



Remote Controller:

This is an IR remote controller for convenience.



Battery:

These are 2(two) battery for the remote controller.

1-1. Product Contents (16CH)

After removing packing materials of this product, check whether all following contents are included.



Main Body (DVR):

This converts the analog video and audio signal to the digital signal and saves on HDD.



Power Cable:

This connect the adapter and the power source.



MOUSE:

This is an controller for convenience.



Program CD:

This contains the User's manual and Client Program for DVR.



Remote Controller:

This is an IR remote controller for convenience.



Battery:

These are 2(two) battery for the remote controller.

1-2. Product Characteristics

1) High quality picture

This DVR can record HD, Full HD and video with extreme quality. Also it can displays 4K resolution. Therefore it provides the most clear image quality and the best security level.

2) High reliability

With Embedded hardware and software design, this maintains higher product reliability.

3) Simple usage

This allows users to use it conveniently by placing control buttons similar to existing ones on VCR, and users can easily learn the usage.

4) Pentaplex System

Pentaplex System allows live, recording, backup, networking and playback simultaneously.

5) Selectable recording setup

For recording methods, users can select the frame rate, resolution and video quality individually in order to be appropriate for user's environment.

6) Remote monitoring

With using exclusive line or Internet network, you can search or monitor recorded images remotely by installing exclusive client program on Windows PC or Mac.

7) Backup

You can backup with a versatile external USB devices.

8) Audio recording

You can record all sound inputs simultaneously. Moreover, you can listen to the sound in search and live monitoring and play mode.

9) Various recording methods

This provides convenient use with manual recording, recording by dates and days, hourly schedule recording, sensor and motion detection event recording and others to enable unmanned monitoring.

10) Various total monitoring features

You can cover any security scenario through various sensor inputs and contact output control.

11) Display information in easy-to-understand information method

This enhanced convenience of user by displaying information (date, time, recording method, recording frame number, HDD capacity and others) in monitoring, recording and playing mode in easy-to-understand way.

12) P/T/Z control

By built in RS485, various P/T/Z cameras can be used.

13) Dual CODEC for video transmission

DVR can send 120 fps (based on CIF) regardless of the local recording and viewing setup regardless with recording setup.

14) Web browser support

You can monitor and playback the video and control the PTZ camera by internet explorer.

15) Built in S.M.A.R.T.

You can automatically check the health of the hard disk drives.

16) Language pack

Basically DVR has multiple language set, furthermore you can choose the language set if you want.

17) Text inserter(POS Interface)

You can operate with the POS and ATM.

18) Spot monitoring

Spot out can be enable to monitor sequentially in other place.

19) Touch LED Switch

You can operate with touch LED switch in front panel.

20) Text inserter(POS Interface)

You can operate with the POS and ATM.

21) HD Spot out

You can use one of VGA and HDMI to the HD spot.

1-3. Name of Each Part

[Front Panel]

<04CH / 08CH>


3. IR RECEIVER



- 1. USB ports** : These USB ports are for mouse and USB devices. You should connect correctly the USB devices and mouse as picture directed.
- 2. Status lamps**
POWER : Blue color back light. Power indicator.
RECORD : Red. Indicate the recording.
NETWORK : Green. Lit on connecting the network
- 3. IR RECEIVER** : It is for remote controller.

[Front Panel]

<16CH>

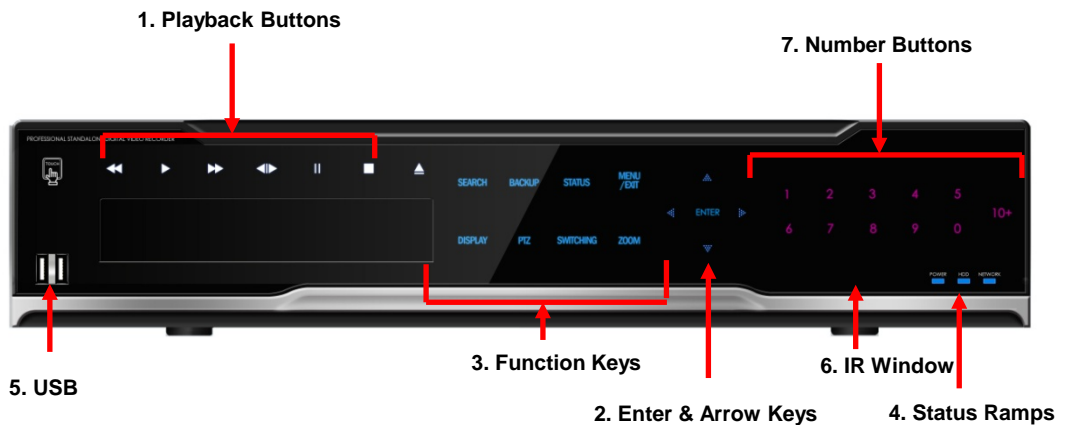

1. Playback buttons : It will be used on playback. If you press these buttons in live mode, it will be automatically changed to the Instant Play mode. ‘Stop’ button changes from the play mode to the live mode.

2. ARROW, ENTER : This button is used to change settings for the product in MENU Mode or used in Search Mode.

3. Function keys

- 1) MENU : It will move to the setup screen from the live mode.
- 2) SEARCH : It will change to the playback mode from the live mode.
- 3) BACKUP : It will move to the backup screen from the live or play mode.
- 4) DISPLAY : It will change the screen splitting sequentially from 1 to 20. It can be adapted both live and play mode.
- 5) SWITCHING : It will change to switching mode except 20 splitting.
- 6) ZOOM : It will go to the digital zoom directly.
- 7) PTZ : It will change to the pan, tilt and zoom control mode from the live mode.
- 8) LOCK/EXIT : If you want move to the upper menu or exit without saving, press this button. On playback, it will disappear the search list for the better viewing. On live viewing, it performs the system lock.
- 9) PANIC : This button is used in emergency status. If you push this button, the DVR starts to record with maximum speed regardless of setting value.

4. Status lamps

- POWER : Blue color back light. Power indicator.
- RECORD : Red. Indicate the recording.
- NETWORK : Green. Lit on connecting the network
- ALARM : Red. It will be lit on when the events happen

5. USB ports : These USB ports are for mouse and USB devices.


6. IR Window : the window for remote controller

7. Number buttons : If you press this button, it will be changed to full screen in live viewing or playback

(※ In menu and password setting, it is automatically converted to number buttons)

[Rear Panel]

<04 CH>

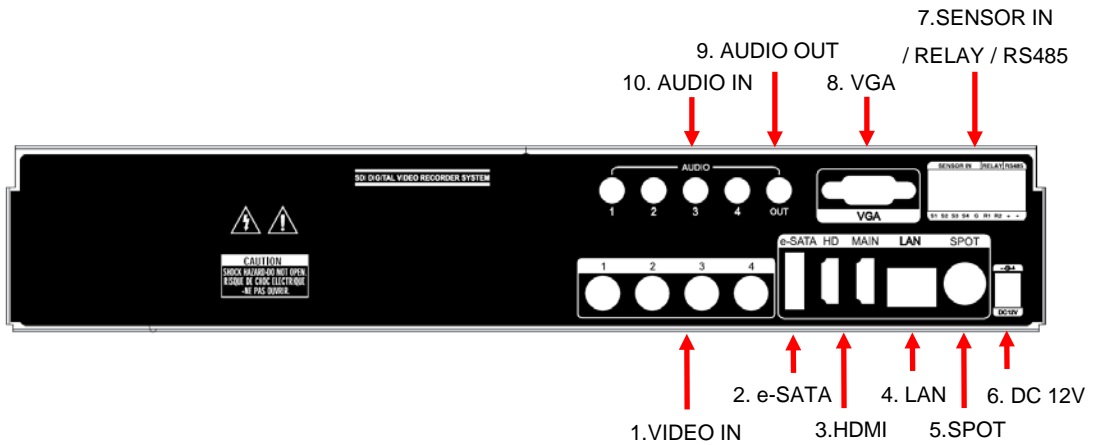


1. **VIDEO IN** : This receives images from cameras.
2. **e-SATA** : e-SATA port for external HDD storage.
3. **HDMI** : Video output for high resolution monitor.
4. **LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
5. **SPOT** : For spot CRT monitor, composite signal comes out.
6. **DC 12V** : Power input.
7. **SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product
 (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
8. **VGA** : Video output for VGA display
9. **AUDIO OUT** : RCA audio out terminal.
10. **AUDIO IN** : RCA audio in terminals. You can record 4 channels at the same time.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<08 CH>

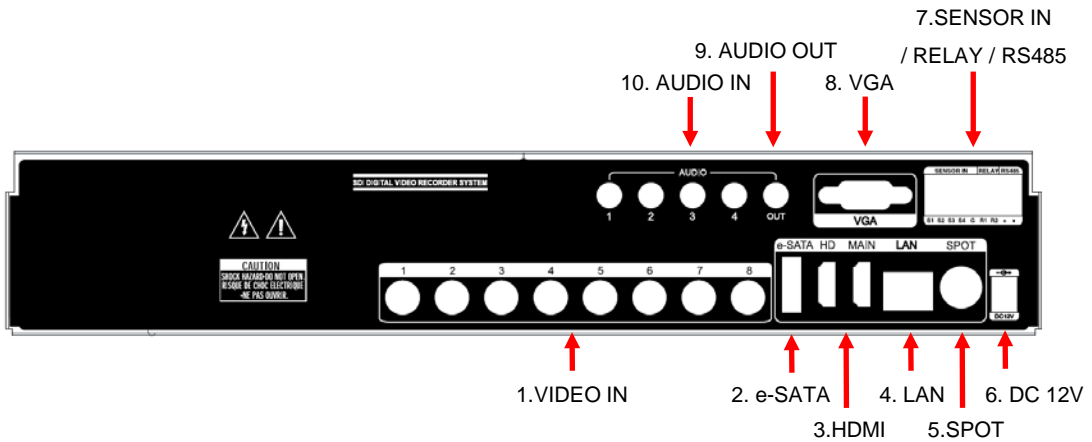


1. **VIDEO IN** : This receives images from cameras.
2. **e-SATA** : e-SATA port for external HDD storage.
3. **HDMI** : Video output for high resolution monitor.
4. **LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
5. **SPOT** : For spot CRT monitor, composite signal comes out.
6. **DC 12V** : Power input.
7. **SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product
 (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
8. **VGA** : Video output for VGA display
9. **AUDIO OUT** : RCA audio out terminal.
10. **AUDIO IN** : RCA audio in terminals. You can record 4 channels at the same time.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<16 CH>

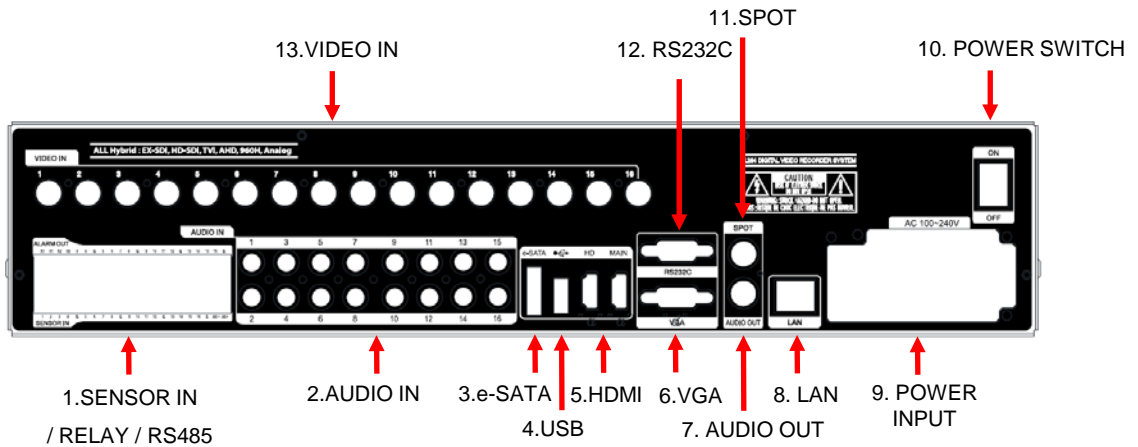


1. **SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
2. **AUDIO IN** : RCA audio in terminals. You can record 16 channels at the same time.
3. **e-SATA** : e-SATA port for external HDD storage.
4. **USB** : This USB port is for mouse and USB devices.
5. **HDMI** : Video output for high resolution monitor.
6. **VGA** : Video output for VGA display.
7. **AUDIO OUT** : RCA audio out terminal.
8. **LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
9. **Power Input**
10. **Power Switch(ON/OFF)**
11. **SPOT** : For spot CRT monitor, composite signal comes out.
12. **RS232C** : This is Serial communication(RS232C) cable connection terminal.
13. **VIDEO IN** : This receives images from cameras and sends them to monitors.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

CH2. Installation Method and Cautions

2-1. Cautions

WARNING
Risk of electric shock.
Do not open the cover of the product.
Servicing of this product by unauthorized personnel is prohibited
and will result in a void of warranty.



**In order to ensure the most stable conditions for power, the use
of a UPS (Uninterrupted Power Supply) is recommended.**

- Avoid installing the product where there are direct rays or it is hot by locating near from heat generator. (May cause fire)
- Do not put vase, flowerpot, cup, cosmetics, drug, and anything the contain water on product. (May cause fire or electric shock, and it may injure people by falling)
- Do not insert or drop any metal object (coin, hair pin) or flammable object (match, paper) into air hole. (May cause fire or electric shock)
- Do not put any heavy object on it. (May injure people by being fell or destroyed.)
- Put power plug surely not to be moved. (If not, this may cause fire.)
- Unplug power plug and antenna when there are thunders and lightening. (May cause fire.)
- For cleaning the product, wipe surface with dry towel. Using chemical agent or cleaner may change the color and unpeel paint. Do not put several plugs at same time. (May cause electric shock.) If there is smoke or strange smell, stop operation. In this case, turn the power off and unplug it, and then contact our service center. (If you keep using it, this may cause fire or electric shock.)
- Do not unplug by pulling cord. (If cord is damaged, it may cause fire or electric shock.)
- Do not plug or unplug with wet hands. (May cause electric shock.)

- Keep the power cord untwisted. (May cause fire or electric shock.)
- Use proper adapter. (Using too much electric power may cause fire or electric shock.)
- Do not install it at where exposed to rain and wind and water drop. (May cause fire, electric shock and transformation.)
- Keep away from fire. (May cause fire.)
- Do not disassemble or remodel on your own. (May cause malfunction or electric shock.)
- Do not put next to flammable materials like flammable spray. (May cause fire.)
- Do not install it at a place with too much dirt. (May cause fire.)
- Do not install it on unstable places like shaking table and inclined place or shaking place. (May injure users by falling down or being upside down.)
- Do not put an heavy object on power cord or avoid it from being pressed by the device. (May cause fire or electric shock.)
- In case of using extension cord, do not use several devices at same time. (May cause fire with abnormal heating of extension.)
- When there are dirt on power plug pin or power outlet, clean it nicely. (May cause fire.)
- Do not damage on power cord or plug, and bend or twist or pull too much, and put it between other objects or heat. If power outlet insertion part is not tight, do not use it. (May cause fire or electric shock.)
- Do not drop or give a shock to the product. (May injure people or cause malfunction.)
- Do not touch power adaptor or signal controller. (May cause electric shock.)
- Do not put any object too close to block cooling fan. (May cause fire.)
- In case of exchanging batteries with improper type, there might be danger of explosion.
- For used batteries, throw away separately from other garbage.
- When you take out batteries, avoid children from eating them by mistake. Keep them away from children. (If a child ate them, contact a doctor right away.)

Note :

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with the part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

FCC Warning :

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

CE Warning : This is a Class A product. In a domestic environment this may cause radio interference in which case the user may be required to take adequate measures.

This product has obtained EMI registration.

2-2 Product Installation

This product may be composed of camera and monitor in default, and additionally the sensor, microphone, speaker and PC for network can be connected if necessary.

2-2-1. Power Connection

1) Connect power cable to power input terminal at rear side.
(free voltage from 100V to 240V, 50/60Hz)


※ You must operate it at the rated voltage instructed on the user's manual. In case power higher than the rated voltage is supplied, it may cause damages on product.

2-2-2. Connecting External Device

※ Connect it when power of the product is off.

※ Read through user's manual for the device you are connecting carefully.

1) How to Connect External Video/Audio Device

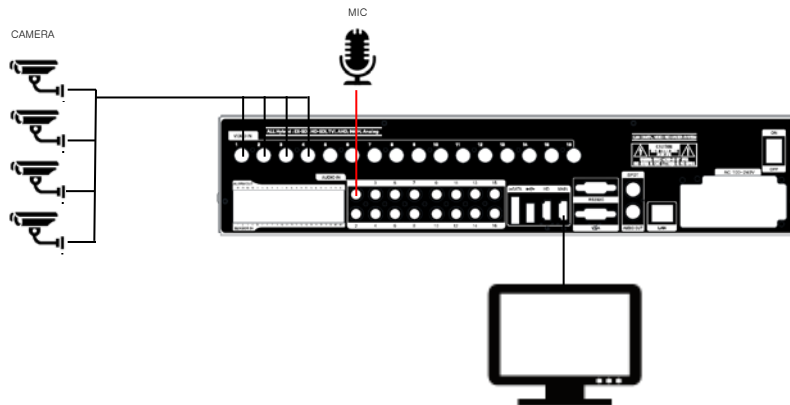

Connect cameras to VIDEO IN(BNC) by channels.

Connect microphone (AMP) to AUDIO IN by channels.


Connect VGA OUT(Main, HD and VGA) to VIDEO IN of monitor.

Connect HD output to HD Monitor.

Connect AUDIO OUT to AUDIO IN of monitor (or speaker).

2) How to connect external sensor

Sensor terminal is composed of 1 input channel and 1 output channel. Sensor out terminal is relay output with 1A, 24V or 0.5A,125V.

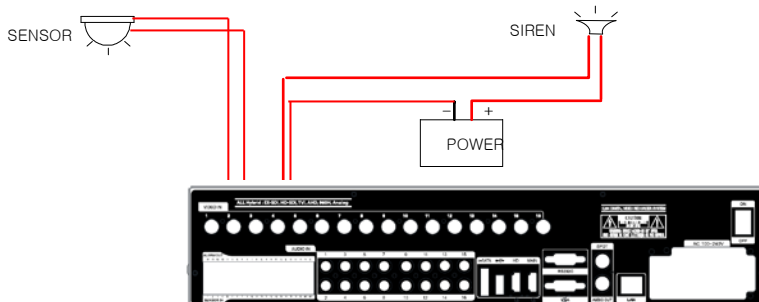

Sensor In : Connect the sensors. The sensor are composed of both signal and ground terminals, with a voltage difference of 5V. In the case that the sensor used for input is of the N/O (Normal Open) type, when the voltage difference between the signal and ground falls to 0V (short), the DVR can use this as a trigger to start alarm/sensor based recording.

Sensor Out : Connecting external electrical devices


The relay output terminal does not provide power, and functions only on an ON/OFF basis via a relay. Normally, the signal and ground should be on an OPEN basis, and the DVR will complete the relay connection.

3) Connecting with PC using LAN cable

If you want to connect DVR to PC directly, use LAN cable, and if you want to use HUB, connect cable via hub.


*Hub : This is a device connecting one office to devices located near with using cable when you organize LAN

*Cable : This is standard UTP cable used for communication among devices through Hub and others when you organize LAN

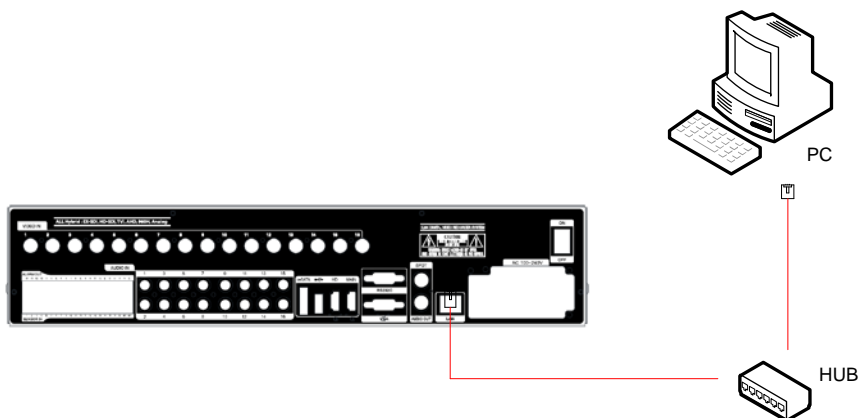

4) Connection Using PTZ camera

In case of using pan and tilt cameras, connect PAN/TILT DRIVE to product as shown at following figure.

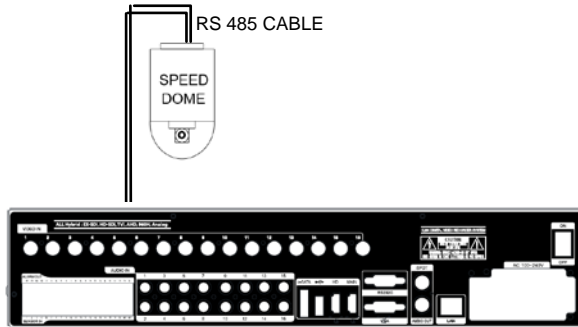

5) Installing Hard disk drive

In case of installing the hard disk drive, open the upper case and install the hard disk drive on the hard bracket. Remember that the main power should be off to install the hard disk drive. If you have any trouble, please contact the technical support.

CH3. How to Use

3-1. General Usage Information

This DVR can be operated with a mouse or remote controller under the four main modes listed below:

Live Mode – This is the “main or default” mode. From this mode you can view in real time all currently operating cameras, information regarding camera status, and have access to Pan/Tilt camera controls. In addition, system status information will be shown during live mode, and other modes can be entered from Live mode.


Setup Mode – The user will be able to customize settings for Live viewing, Recording, Backup, and Camera related devices under the Setup Mode.

Search Mode – In Search Mode, the user will be able to review all recorded footage in the case that an event must be reviewed using a calendar or event based search.

Backup Mode – In Backup Mode, the user will be able to archive the desired data to the preferred supported media of their choice (ex. External CD&DVD RW, USB Backup, Remote Client Software, etc.)

Password Protection – The DVR system will utilize a user ID and password system to prevent unauthorized usage of this product. Control of the system will only be possible after entering a proper ID and password as illustrated below. (Factory Default settings are blank for these fields).

IDs and passwords should be managed by a system administrator, as different users may be given different levels of access to the DVR.

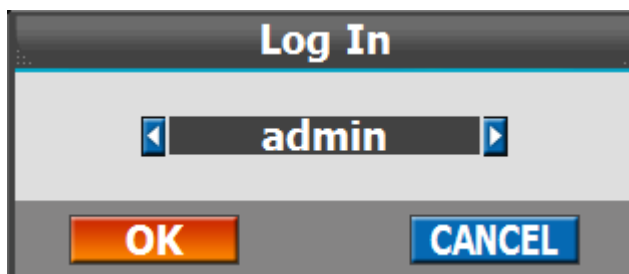

3-2. LIVE Mode







In this section you will know how to split the video mode into 1, 4, 6, 8, 9, 12, 16, as well as auto sequencing, PTZ Control, Mouse control, Setup configurations, Backup.



3-2-1. LIVE Mode Control

1) Live View Status










You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.

	Recording indicator
	Event recording indicator
	Motion detection indicator
	Sensor activation indicator
	POS indicator
	Audio indicator

2) Live Menu Bar


You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.

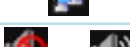

	Date
	Time
	Screen Split mode change
	Sequence activation On/Off
	Hard drive usage
	Lock/ Unlock indicator
	Scheduler activation indicator On/Off
	Network connection indicator
	Audio out channel indicator On/Off

3) Live Popup Menu

By Right-Clicking anywhere on Live Screen, you may view the Live Popup Menu. By using the Live Popup Menu, you can quickly jump to the necessary configuration and settings.

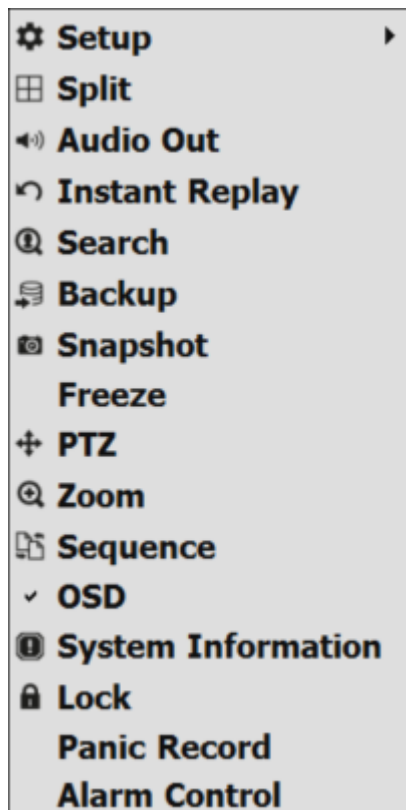

3-2-2. LIVE Mode Feature

1) Setup : refer to 3-4

2) Split

Change video split mode for Live View.



3) Audio Out

 
You can choose the audio out from this menu.



4) Instant Replay

This is very convenient function to catch the abrupt accident. During live viewing, you can go directly to the playback screen.

If you choose the 'Instant Replay', the DVR goes to the 'PLAY' with the present time screen. And you can use the functions related playback.




5) Search : refer to 3-3

6) Backup

There are two ways to enter the backup. The first one is that right click on the live screen, and the second one is that enter directly from 'Search' upon playback. If you choose the 'backup' from the live menu, below backup screen appears.

- You can set the backup device, time and channel from the backup screen.

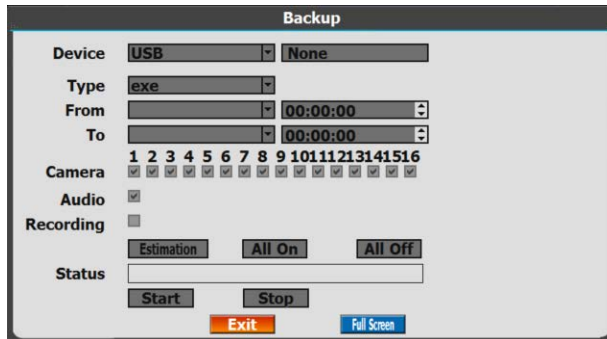

- After that, if you push the 'Estimation' button, it will show the estimated backup file size.



- Then click the 'Start' button.



7) Snapshot

You can save the live snapshot by this menu. All channel will be saved individually to the USB memory by JPG format. You should put in USB memory before saving.

8) Freeze

You can freeze the current live video channels.

9) PTZ (Pan, Tilt and Zoom)

It is possible to control the pan and tilt camera by itself. Press the ‘PTZ’ button to enter the PTZ mode. For Menu setting, you can set it by pressing button as displayed at bottom of window.

- You can set the direction of camera by using the arrow buttons.



Preset[Enter]	Preset setup
One Push[8]	Auto Focus
Menu[7]	Camera OSD menu
Zoom -/+	Zoom out/in with mouse or [1]/[2] buttons on the remote controller.
Focus -/+	Adjust the focus with mouse or [3]/[4] buttons on the remote controller.
IRIS -/+	Adjust the iris with mouse or [5]/[6] buttons on the remote controller.

❖ For more details, refer to [CH 2-2. Connection Using PTZ camera] and [CH 3-4-3. Device]

- Preset [SEL] : You can enter the preset number using the keypad appearing the preset button or 'SEL' button on the remote controller.




Run[SEL]	Move to preset number
Set[Play]	Set a position and name of a preset number
Clear[Stop/Backup]	Clear a preset set
Exit	Exit preset mode

❖ How to use Preset

1. Click the right mouse button and choose PTZ from a live pop-up menu.
 2. After you move the screen, click the set button and set the position and name.
- ※ If you choose not a specified preset, UNDEFINED is displayed on the screen.
 ※ You can set up to 32. If you choose out of valid range, there is no action.

- Camera[0] : You can choose the PTZ camera with mouse or [0] buttons on the remote controller.
- Setup[9] : If you press Setup using mouse (or [9] button on the remote controller) in PTZ Menu, PTZ setup window will appear. You can set the pan and tilt speed, 32 preset name and tour sequence as well as dwelling time.

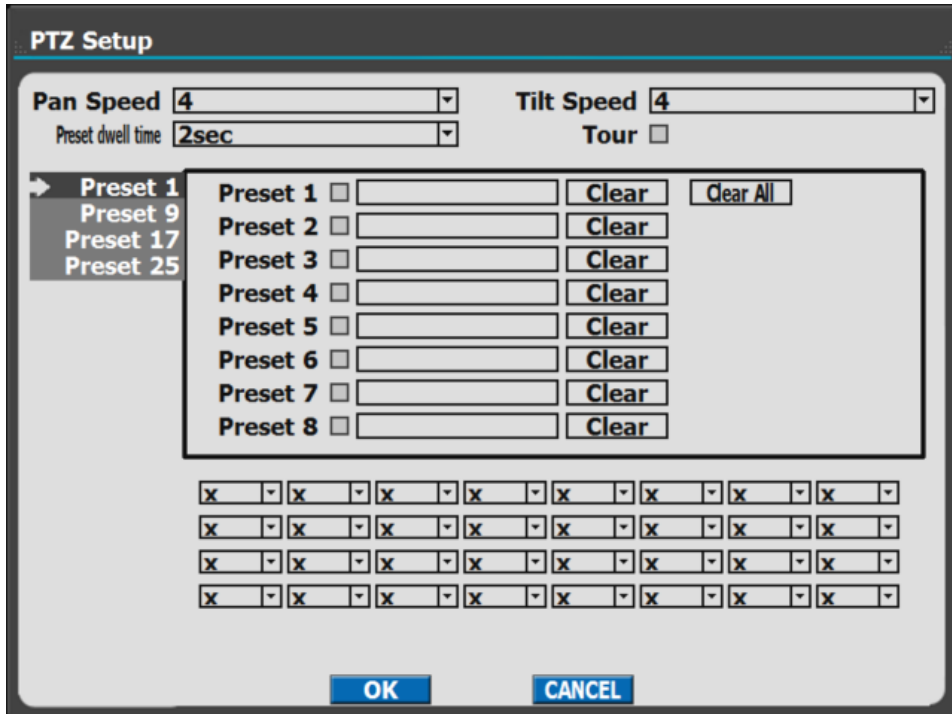

Pan Speed	Set pan speed 1~7
Tilt Speed	Set tilt speed 1~7
Preset dwell time	Set preset dwell time 2~6 sec
Tour	When you check the tour box, the preset tour starts in the order specified by the user.

❖ How to use Tour

Choose a preset from upper left to right.


※ If you use not specified presets, it automatically skip the tour.

10) Zoom

Digital zoom of live screen for selected channel. It can be 8x zoom and also control the position by mouse dragging.



- Camera[0] : You can choose the camera for zoom with mouse or [0] buttons on the remote controller.
- Zoom[9] : You can zoom with mouse or [9] buttons on the remote controller.

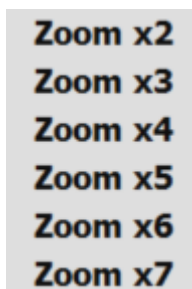

11) Sequence

Sequence Mode On /Off: Switches screens as set on Dwell time under Screen Setup

12) OSD

This feature shows current settings of product through GUI (Graphic User Interface) and INFO button at front side is used for this feature. When you turn on power, this will show current date and time, System Lock Setting, HDD usage, Video Loss Check, Sensor ON/OFF, Motion Detection Check, Recording Status and Schedule Feature Usage. As you press INFO button once more, GUI disappear->OSD disappear->GUI appear->OSD appear will happen sequentially.

- ❖ GUI (Graphic User Interface): displaying current status on monitor as images
- ❖ OSD (On Screen Display): displaying current status on monitor as character

13) System Information

It shows the system information.

**14) Lock/Log In**

Logs off current user and locks DVR from any further configuration and screen setup until next Administrator logs in.

15) Panic Record

manually record all channels in highest quality on the DVR. This type of recording is designed to be used in the case of emergency when something is happening.

16) Alarm Control

You can control all alarms connected and the DVR system buzzer.

The image shows a screen titled "Alarm Control" with a list of 16 alarms and a buzzer. Each item has two checkboxes: "On" (unchecked) and "Off" (checked). At the bottom of the screen is a blue "OK" button.

Item	On	Off
Alarm 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 3	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 4	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 5	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 6	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 7	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 8	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 9	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 10	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 11	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 12	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 13	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 14	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 15	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm 16	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Buzzer	<input type="checkbox"/>	<input checked="" type="checkbox"/>

OK

3-3. Search Mode

Search mode consists of two different modes of searching. The video data can be selected by 5 modes.

Time	Search by Month / Day / Time selection.
Event	Select from Event Log.
POS	Search by POS transaction data.
Thumbnail	Play the specific channel by user defined interval.
Panorama	Play the specific channel continuously.

3-3-1. Search Selection Type

1) Time Based search selection



- Select the Date you wish to view by selecting a Date from Calendar.
- Select time you wish to view by selecting a time from Time Line.
- You may click on Refresh, Option, Backup, Import, Exit , Full Screen for additional features and options.

2) Event Based Search Selection



- Select search date from calendar
- Event log will be displayed according to the chosen date
- Preview pane above the Event Log will show preview of currently selected video

3) POS Search



- Select search date from calendar
- POS transaction data will be displayed according to the chosen date
- You can search detail by filter.

4) Thumbnail Search



- Select search date from calendar
- Choose the channel and interval, then select the time from bar or typing
- The selected channel will be played individually by interval time difference


5) Panorama Search



- Select search date from calendar
- Choose the channel and time from bar or typing
- The selected channel will be played continuously. If you want to play faster, use the FF button.


6) Search Related buttons

- You may click on Refresh, Option, Backup, Import, Exit, Full Screen for additional features and options

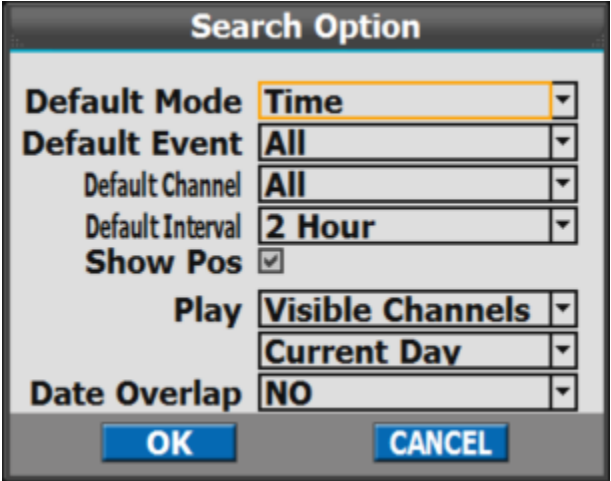Refresh	Reload all data list.
Option	<p>Search option.</p> 
Backup	Backup recorded data to external USB device.
Import	Playback recorded data from external USB device.
Exit	Move to Live video mode.
Full Screen	Load playback data to full screen mode.

3-3-2. Play Mode

If you choose 'Full Screen', the full screen appear. You can control the play speed in here.

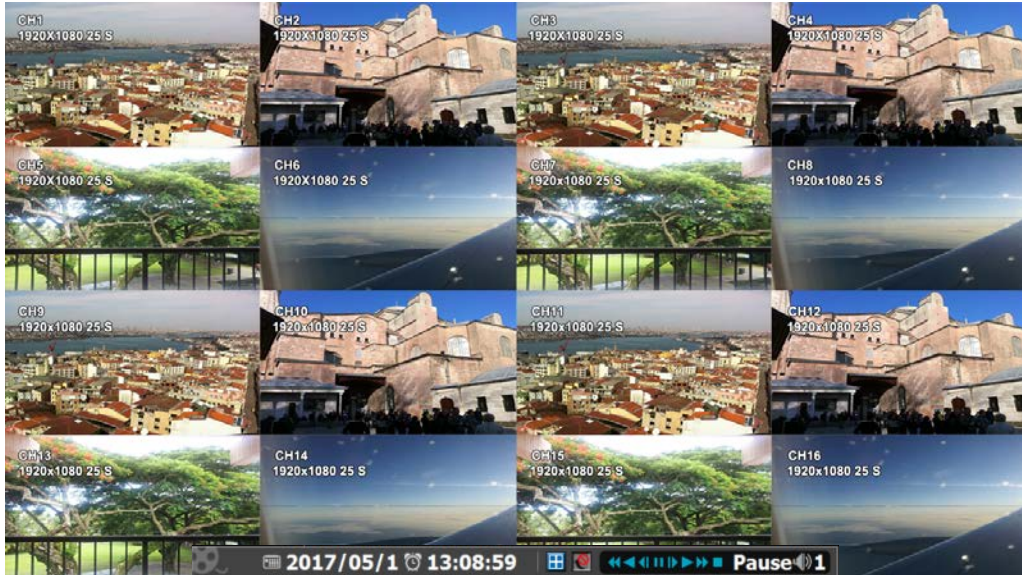

► Play Screen GUI

1. Split Screen
2. Sequence
3. FB (Fast Backward): FB×2, 4, 8, 16, 32, 64 times faster
4. Playback : Backward normal speed
5. SB (Slow Backward):SBx1/2, SBx1/4
6. STILL (Pause) / Frame advance
7. SF (Slow Forward):SFx1/2, SFx1/4
8. Play : Forward normal speed
9. FF (Fast Forward): FF×2, 4, 8, 16, 32, 64 times faster
10. STOP : Stops playing and returns to LIVE Screen.
11. Status information


3-4. SETUP Mode

Access Setup menu from Right Clicking mouse button to Popup Menu.
Configure Display, Record, Device, Network, System which is navigated by clicking on corresponding tab menu at the top of the screen.


Apply	Apply changes.
Default	Return to factory default settings.
Menu	Go to previous Menu.

3-4-1. Display

Configure OSD and Main Display setting.

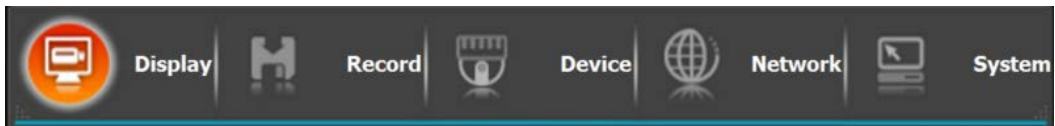


1) OSD

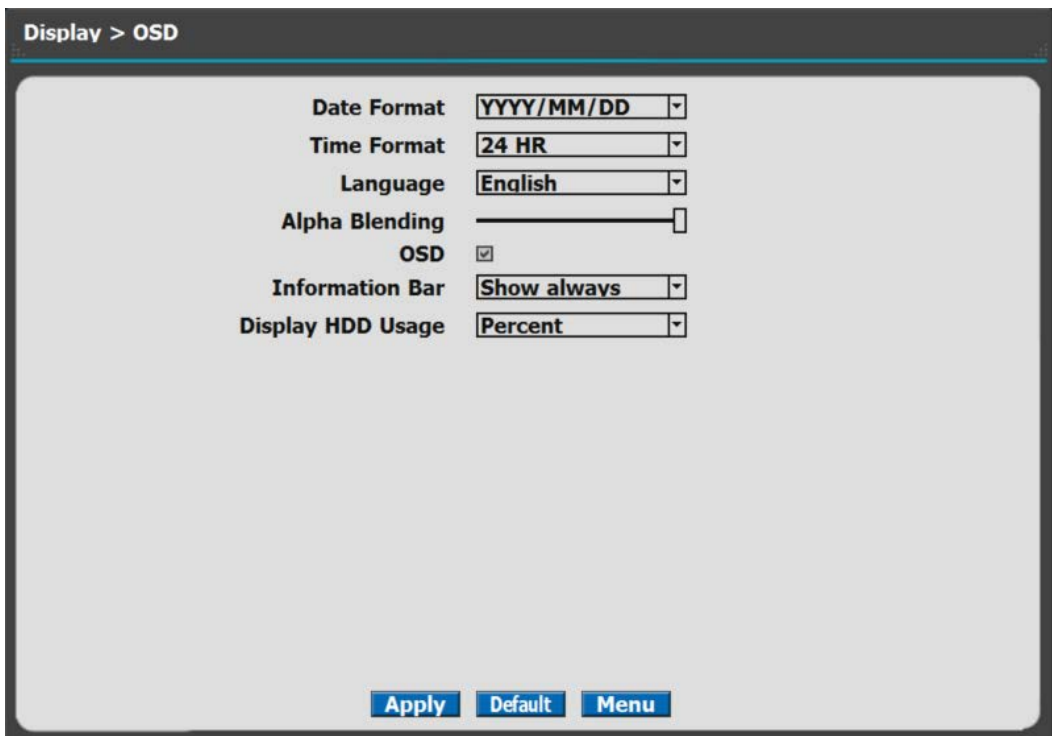

Date Format	YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY
Time Format	24HR, 12H(AM/PM)
Language	Select system language.
Alpha Blending	Adjust transparency of System Menus.
OSD	OSD On/Off
Information Bar	Information Menu Bar Hide always/Auto hide/ Show always
Display HDD Usage	Percent/Oldest Date

2) Display


- You can use dual monitors that VGA and HDMI show same images.
- Configure and view Resolution, Sequence Dwell Time settings.

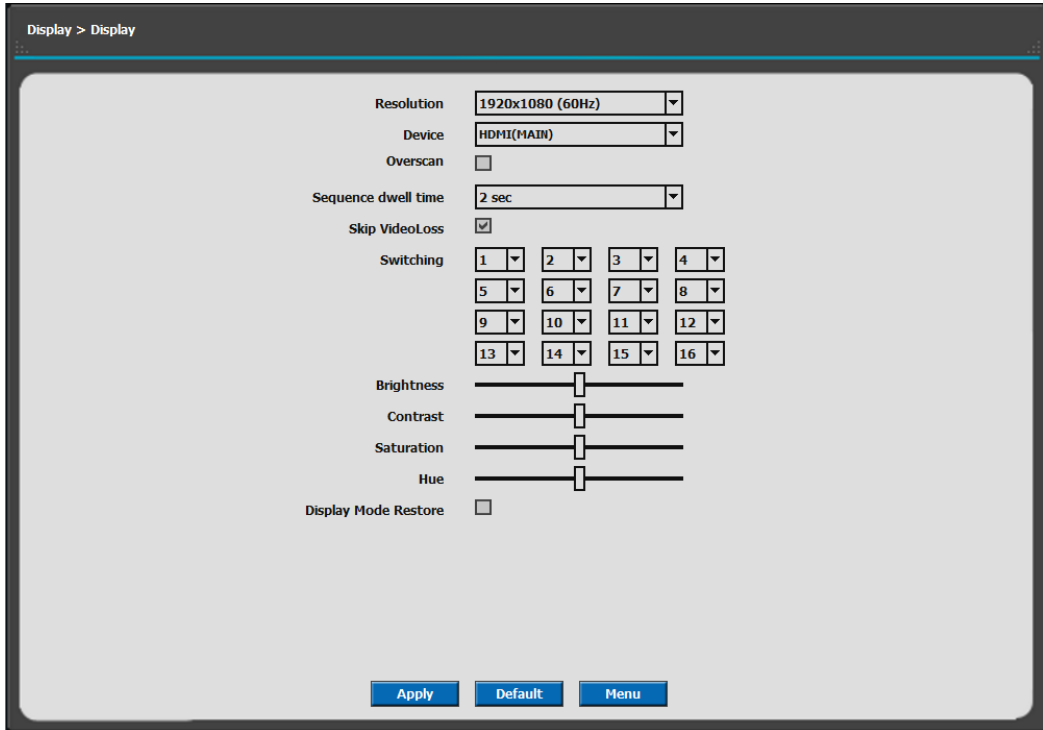

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz),1920x1080(60Hz), 1920x1080(50Hz) , 3840x2160 (only MAIN)
Device	VGA/HDMI(HD)+HDMI(MAIN), VGA/HDMI(HD), HDMI(MAIN)
Overscan	Cut off a bit of each edge of the screen
Sequence dwell time	1 sec ~ 60 sec
Skip Video Loss	Skip a video loss channel when you set the sequence of the live screen.
Switching	Set a display for the live screen.
Brightness	Adjust brightness.
Contrast	Adjust contrast.
Saturation	Adjust saturation.
Hue	Adjust hue.
Display Mode Restore	Keep your live mode.

3) HD Spot


- If you are not using 4K for display, you can use HD Spot.

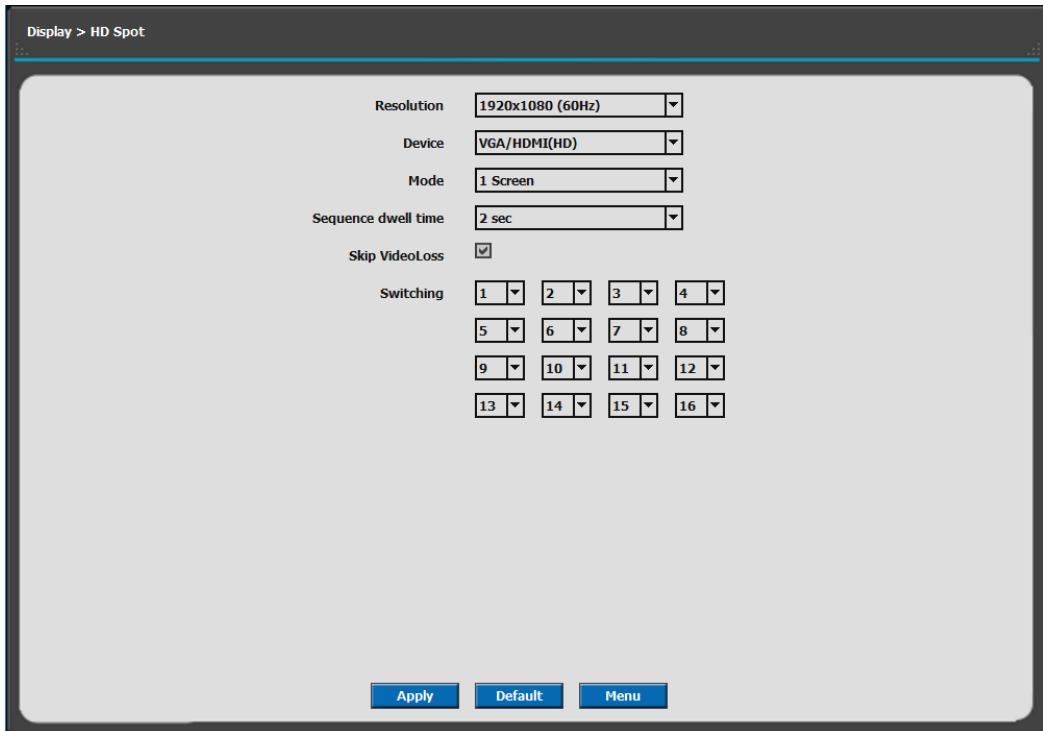

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz),1920x1080(60Hz), 1920x1080(50Hz)
Device	VGA/HDMI(HD)+HDMI(MAIN), VGA/HDMI(HD), HDMI(MAIN)
Mode (Split Screen)	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Skip Video Loss	Skip a video loss channel for the sequence of the HD Spot.
Switching	You can program the sequence channels. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

4) SPOT Control


- Set the SPOT output .

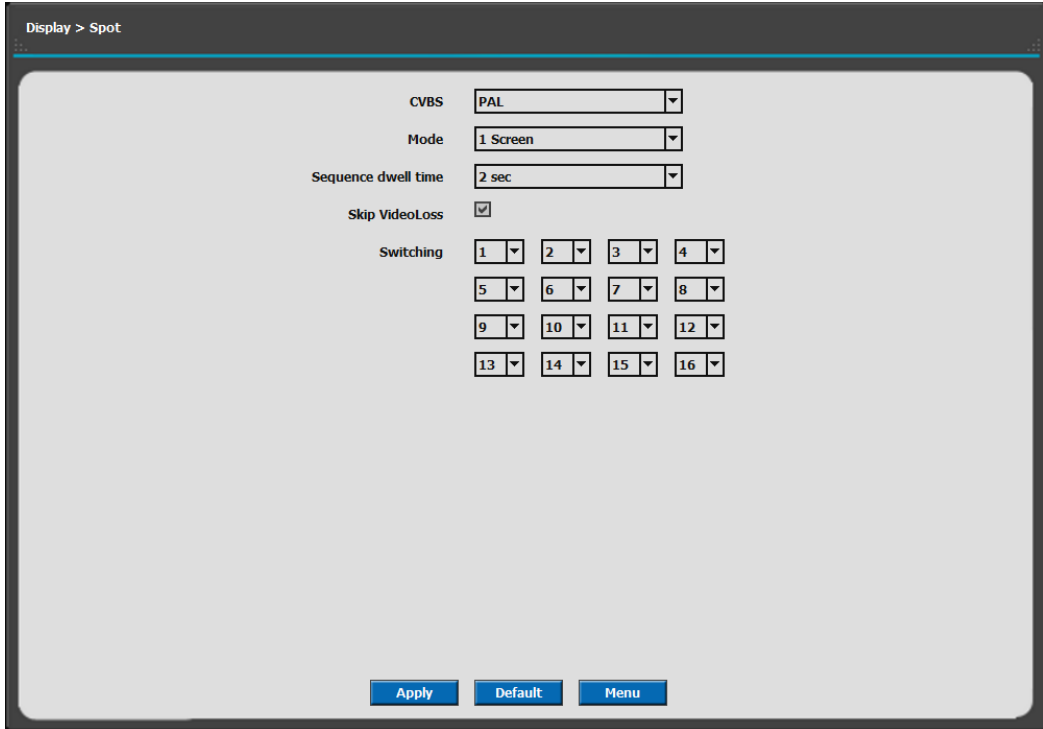

CVBS	Choose NTSC or PAL
Mode	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Skip Video Loss	Skip a video loss channel for the sequence of the Spot.
Switching	You can program the sequence time. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

5) Analog Color


- Adjust color of analog cameras.

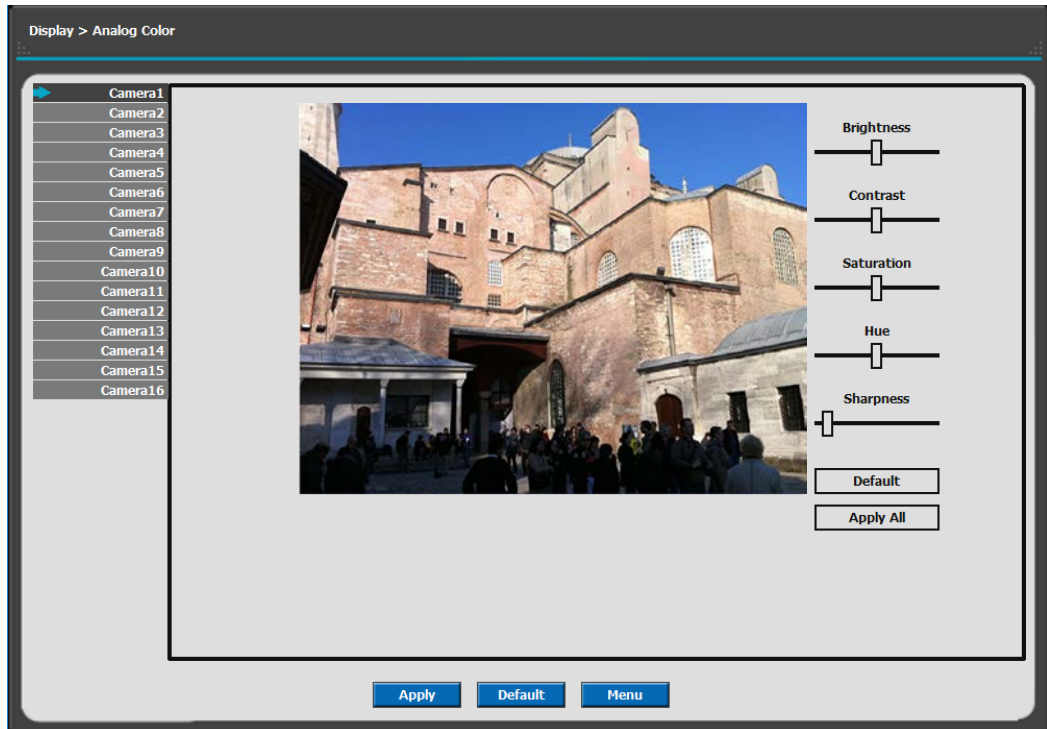


Brightness	Adjust brightness
Contrast	Adjust contrast
Saturation	Adjust saturation
Hue	Adjust hue
Default	Return to factory default settings.
Apply All	Apply changes to all channels.

3-4-2. Record

Configure and view Event In, Record, Group, Holiday settings

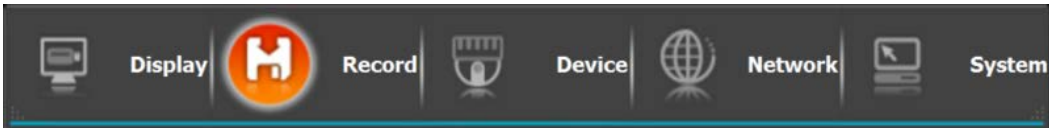

1) Record

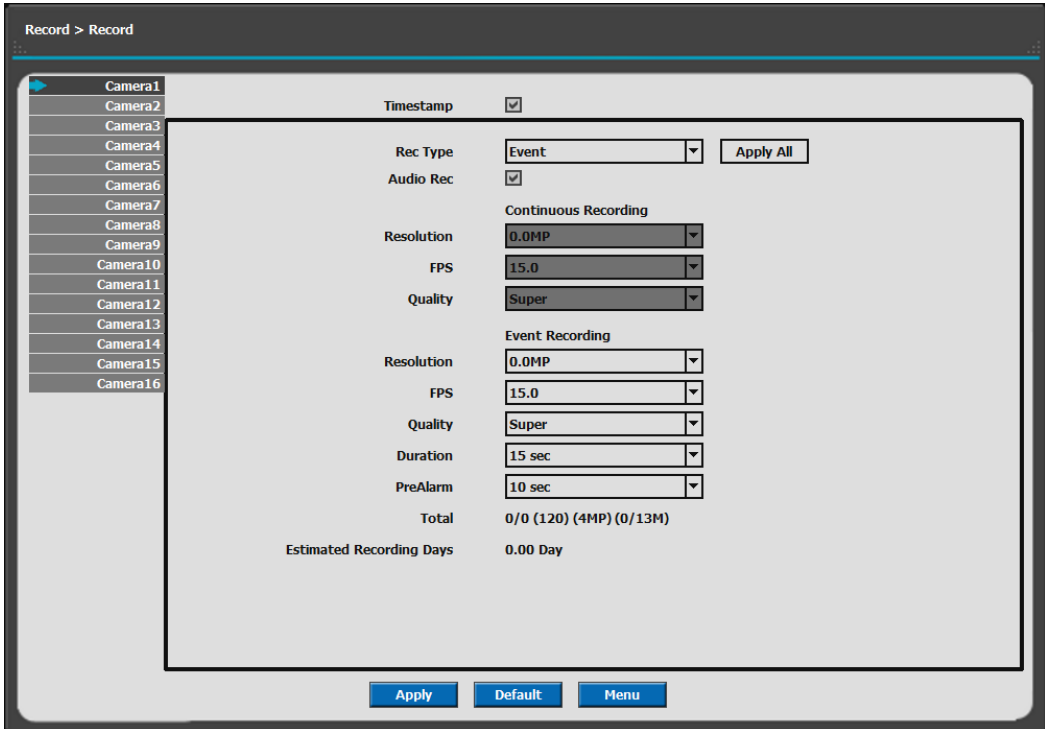


Rec type	None, Conti, Event, C/E	
Audio Rec	To select audio recording or not.	
❖ ALL Apply	Apply the setting to whole channel.	
Resolution	It shows the camera resolution.	
FPS	It shows FPS of the camera.	
Bitrate	It shows Bitrate of the camera.	
❖ Event	❖ Duration	5 ~ 60 sec
	❖ PreAlarm	0 ~ 10 sec
❖ Total	It shows the total MB.	
❖ Estimated Recording Days	This is an automatic calculator of the recording days.	

- ❖ Event recording has priority in recording. In C/E recording, the recording will follow continuous recording setup in normal condition while it would follow event recording setup in event generation.
- ❖ For convenience, you can use the ‘Apply All’ menu to change with the same preference. You don’t have to setup each channel if you using the ‘Apply All’ function.
- ❖ Duration is to set post event recording time.
- ❖ Pre alarm is to set pre event recording time.
- ❖ Total shows total fps of all channels. If total fps is more than supported, it turns red. If it turns red, you need to set a lower resolution or FPS.
- ❖ Event recording has priority in recording. In C/E recording, the recording will follow conti recording setup in normal condition while it would follow event recording setup in event generation.

2) Group

- With this menu, you can set the group using the scheduler. If you choose ‘Group’ tab, you can see the similar screen with ‘Record’. The setting is similar

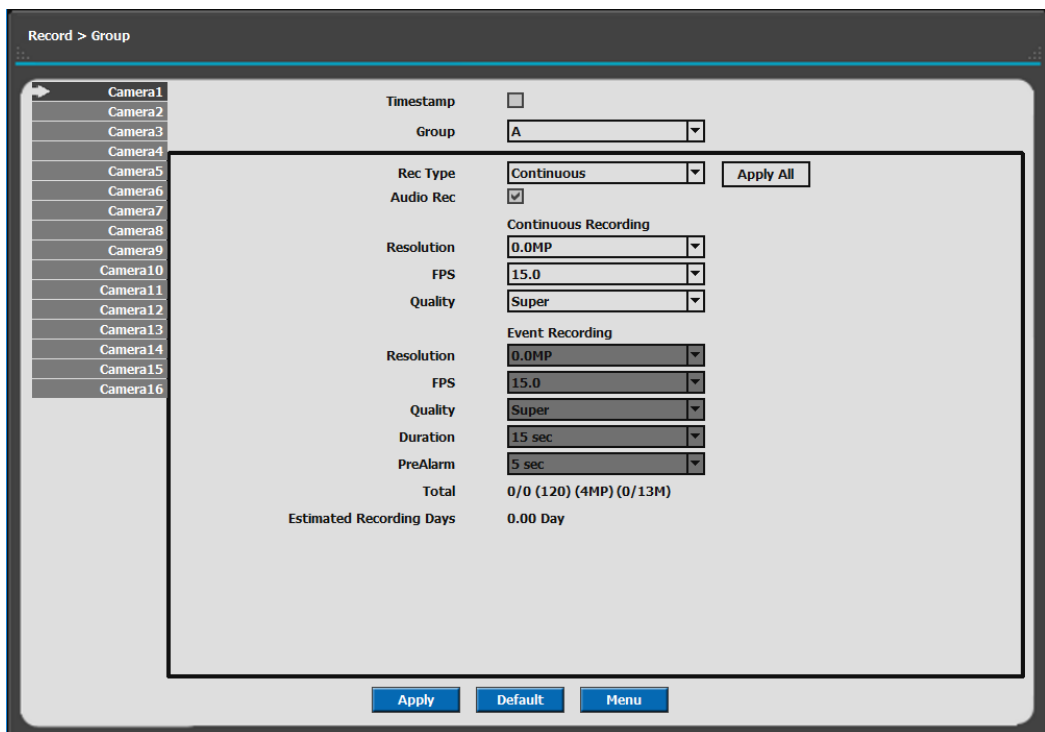


3) Schedule

- In recording, Schedule recording setting is most preferred. So if you activate the weekly scheduler, you cannot record manually.
- Schedule On : The weekly scheduler is activated.
- Holiday On : The holiday that set by user is activated.
- Since you can set recording weekly, you can reduce recording of unnecessary time period. In Scheduler window, days and channels are displayed, and recording information for each channel is displayed at bottom of window.


❖ How to set the weekly scheduler

1. Choose 'Scheduler' to 'On'.
2. Choose group and drag to wanted time.
3. Press the time bar , if you want to set the detailed time.
4. Press 'Enter' button to change the group of the selected area.
5. If you activate 'Holiday' scheduler, choose 'holiday'.

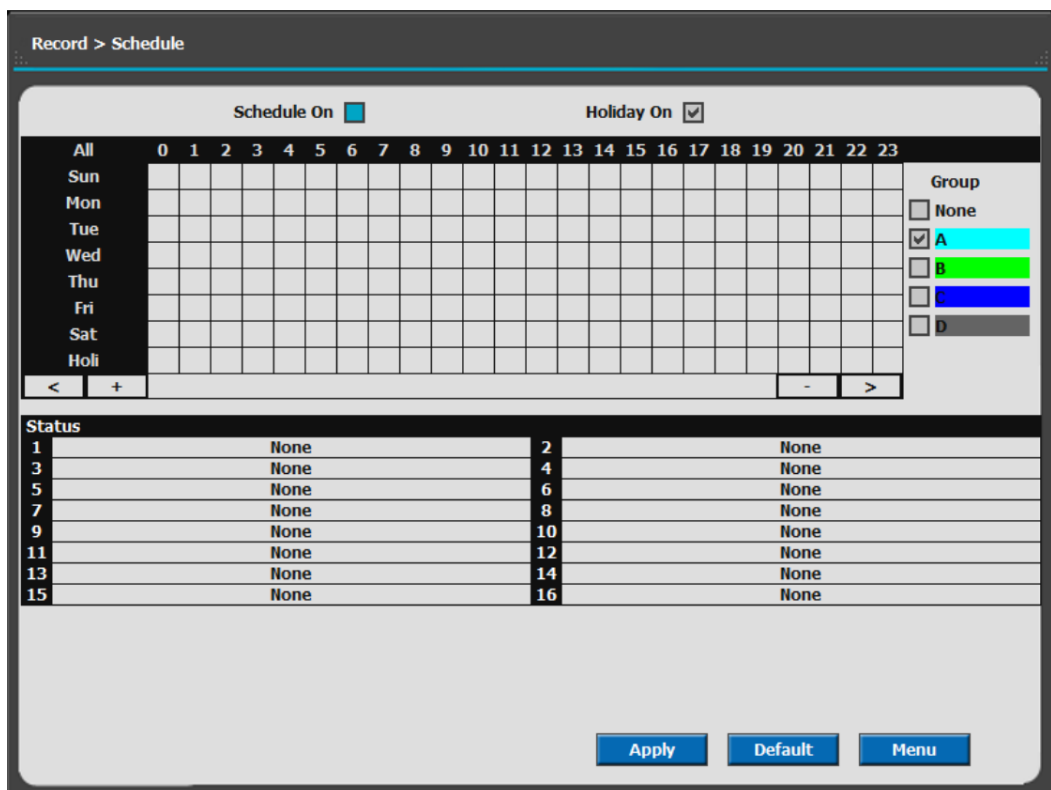

4) Holiday

With this menu, you can add the holidays. Use the 'Add' button for adding the holiday and use the 'Delete' or 'Delete All' buttons for removing the existing holidays.

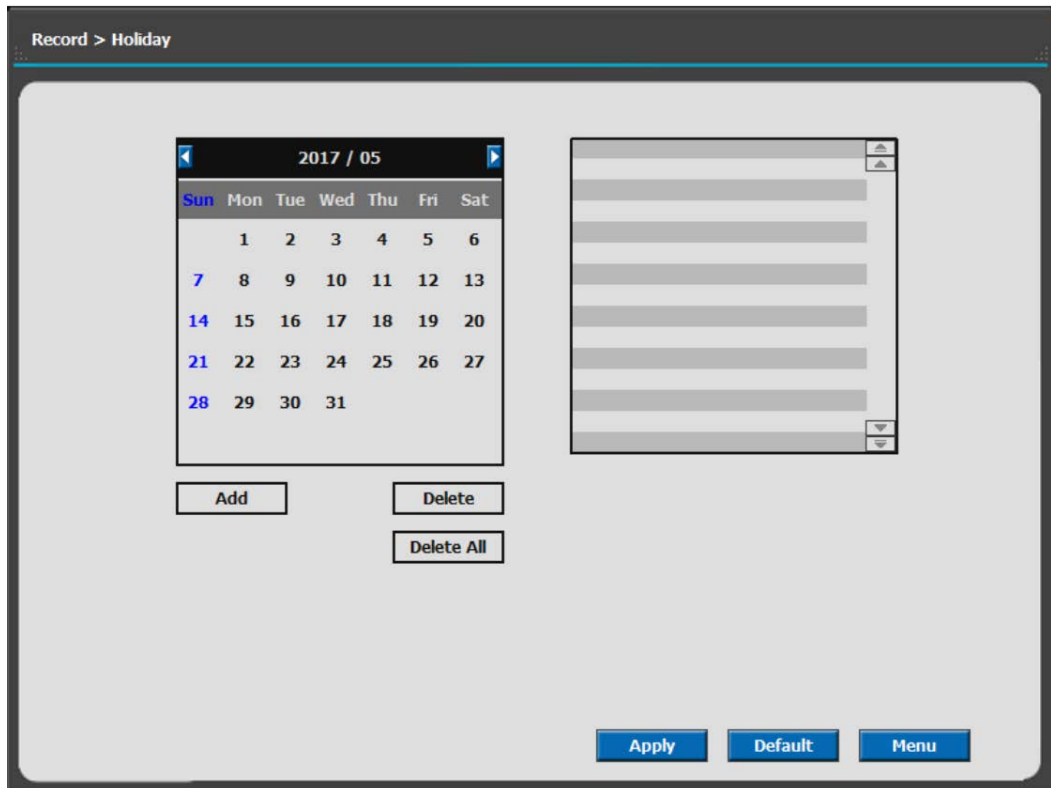


5) Event In

- With this menu, you can set sensor input, motion detection setup. You can also set each channel individually.
- Although you set Motion Detection and Sensor Setting to On in Event menu, if Event Input in Rec Menu is set to None, it only detects and does not record.

❖ Summary regarding as Event Recording

Event In	OSD	Sensor	Motion Detection	POS
Sensor	<input checked="" type="checkbox"/>	ON	OFF	OFF
Motion Detection	<input checked="" type="checkbox"/>	OFF	ON	OFF
POS	<input checked="" type="checkbox"/>	OFF	OFF	ON
All Event	<input checked="" type="checkbox"/>	ON	ON	ON
None		OFF	OFF	OFF

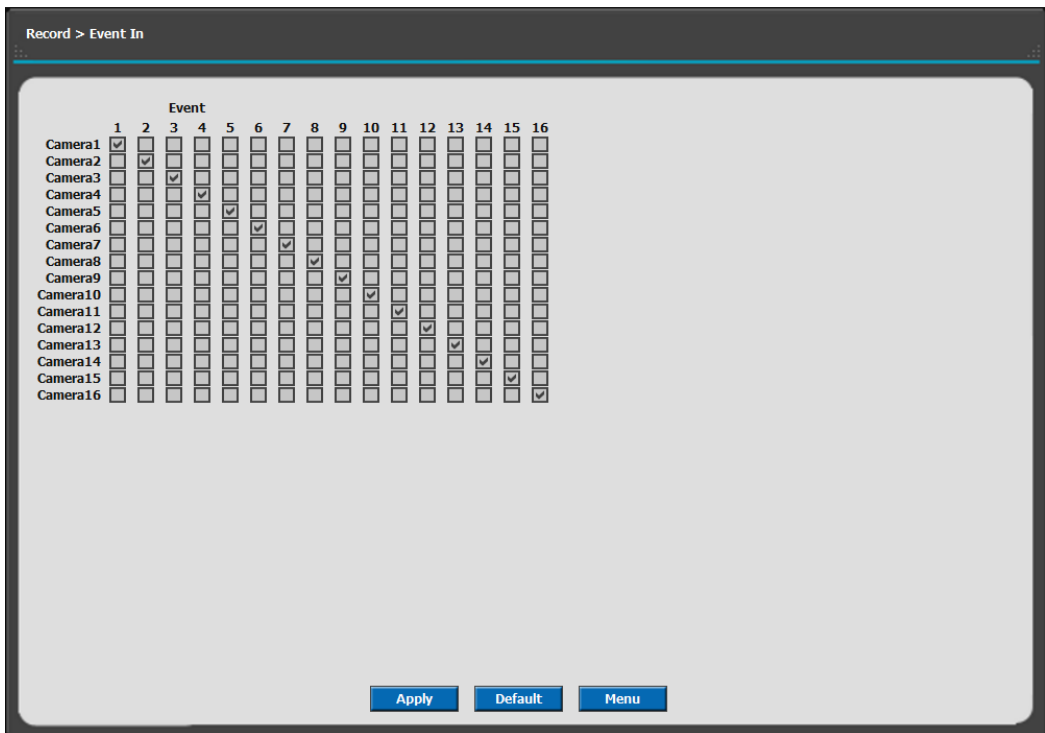


3-4-3. Device

- Configure and view Camera, Audio, Motion Detection, Alarm Out, PTZ, Controller and POS.




1) Camera

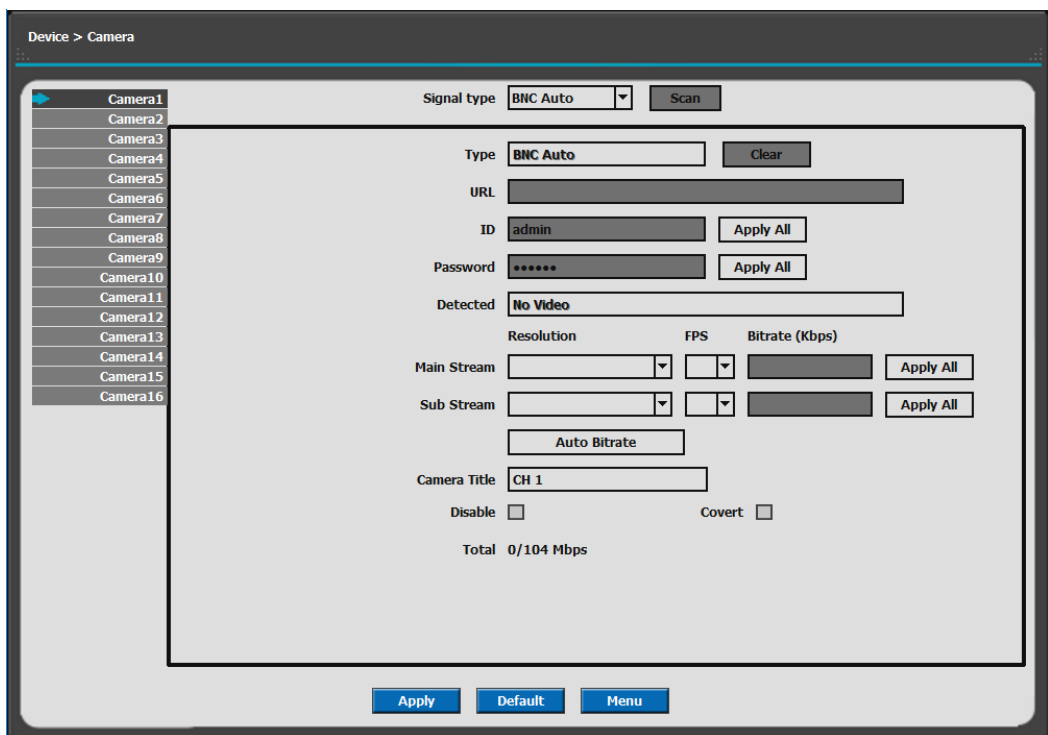


Signal type	BNC Auto : All video input is detected automatically IP Camera : Scan and connect IPC on LAN or URL DVR : Scan and connect another DVR channel
❖ Scan	Scan the IP Camera list on your network.
IPC Auto Configuration	IP Camera Auto Configuration with direct POE
URL	Type IP Camera address or use Scan function
ID/Password	Type ID and password of the camera
Detected	Detected camera video type
Main Stream/Sub Stream	It shows the main and sub stream of the camera.
Auto Bitrate	Set best bitrate of all connected channels.
Camera Title	You can set the camera name.
Disable	Disable current camera. It is useful when the signal is bad.
Convert	Hide current camera from Live view but Record for future searching option.

- ❖ For convenience, you can use the ‘Scan’ function to connect all your IP cameras on your network or DVR. You don’t have to setup each channel if you using the ‘Scan’ function.

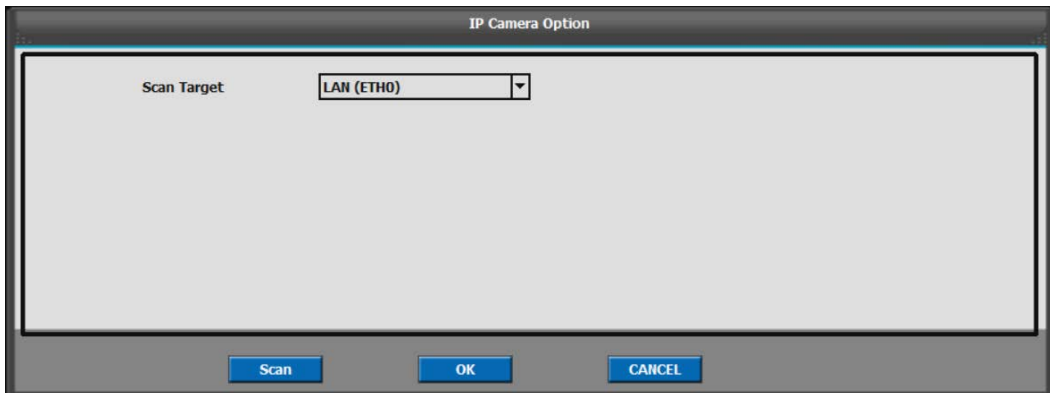

Scan Target	All or Lan(ETH10) or IP Camera(ETH11)
Scan	Go to Scan mode


❖ Scan mode : you can see all IP cameras on your DVR and network.

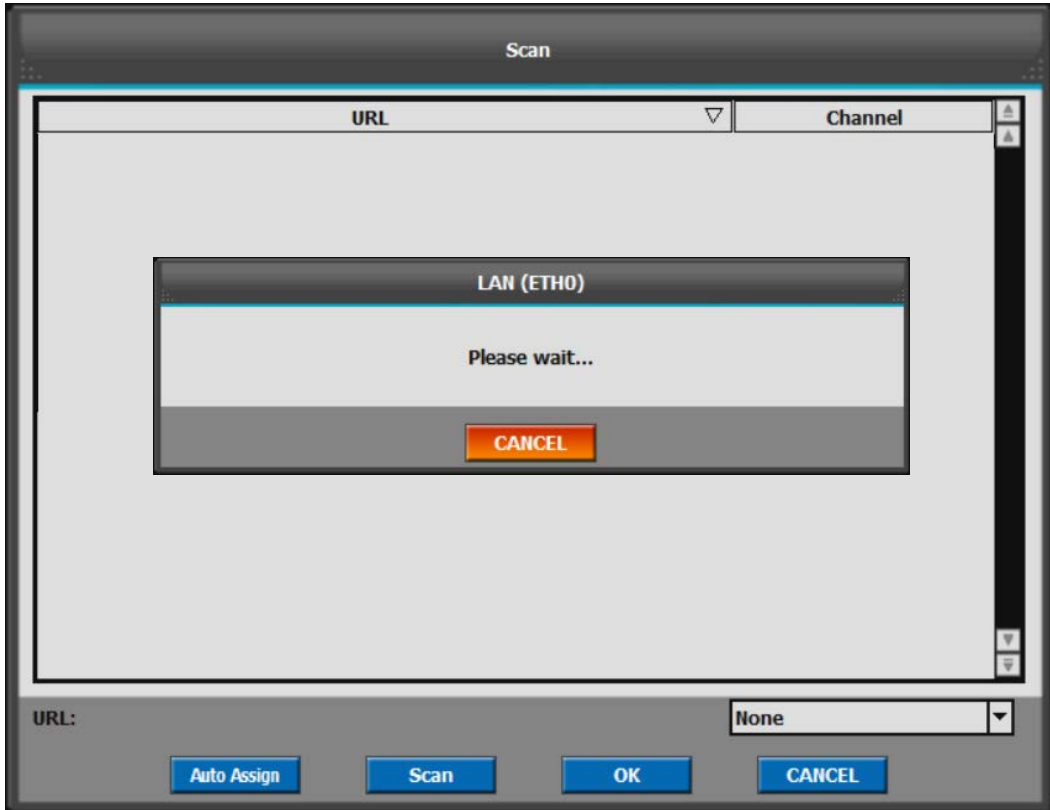

Auto Assign	Auto assign IP cameras on the list to each channel.
Scan	Scan IP cameras


2) Private Zone

If you want to hide some part of the picture for privacy, you can choose the area by dragging the mouse. The selected area will be changed to black screen.

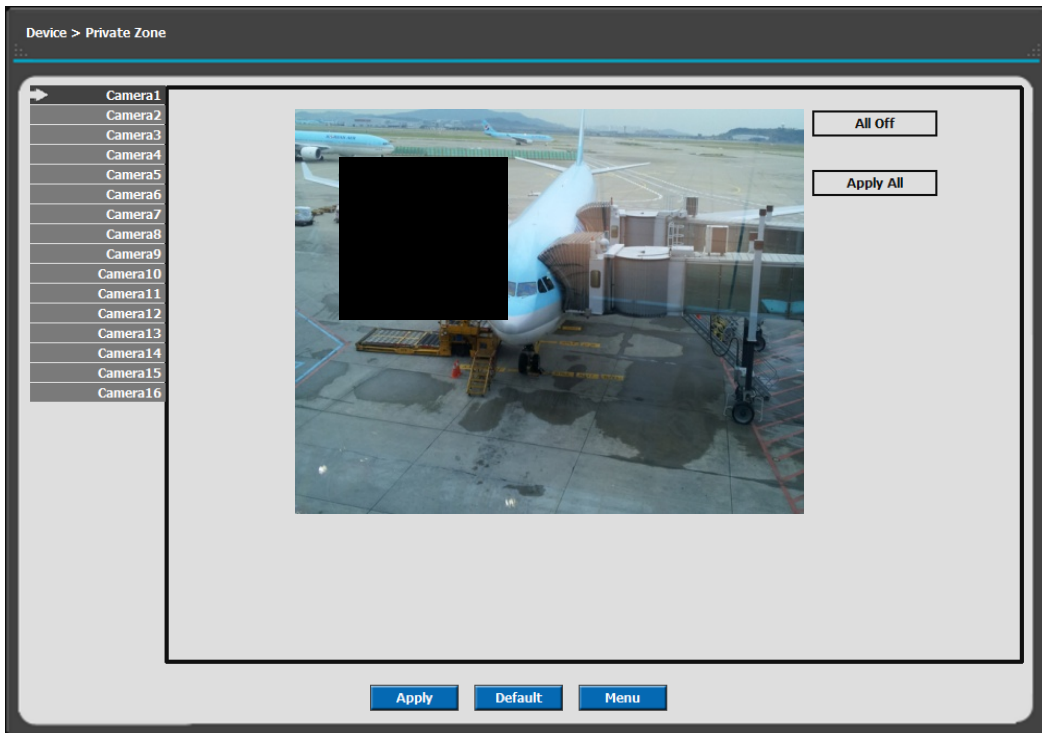

All Off	All off the private zone
Apply All	Apply the setting to whole channel

3) Audio

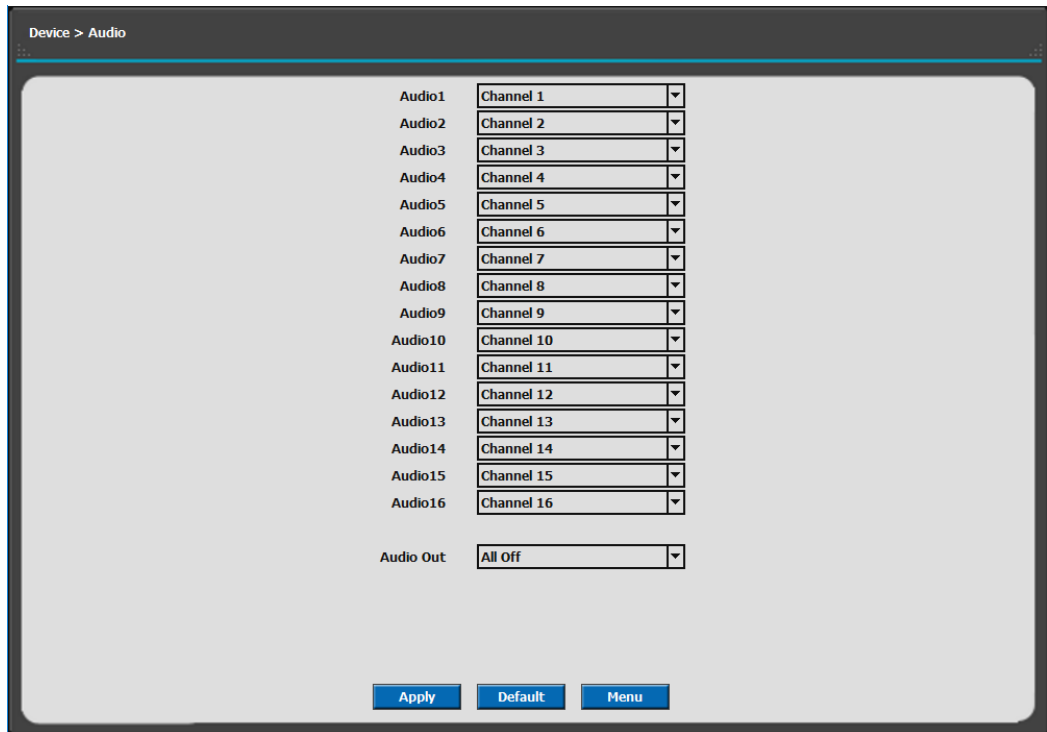


Audio 1 ~ 16	Assign audio input to a video channel.
Audio Out	Select which channel will be heard during Live View.

❖ To use IPC with built-in MIC, set the audio input to off.

4) Motion Detection

- Change settings for Motion Grid selection and Sensitivity Level. You can set multiple area.

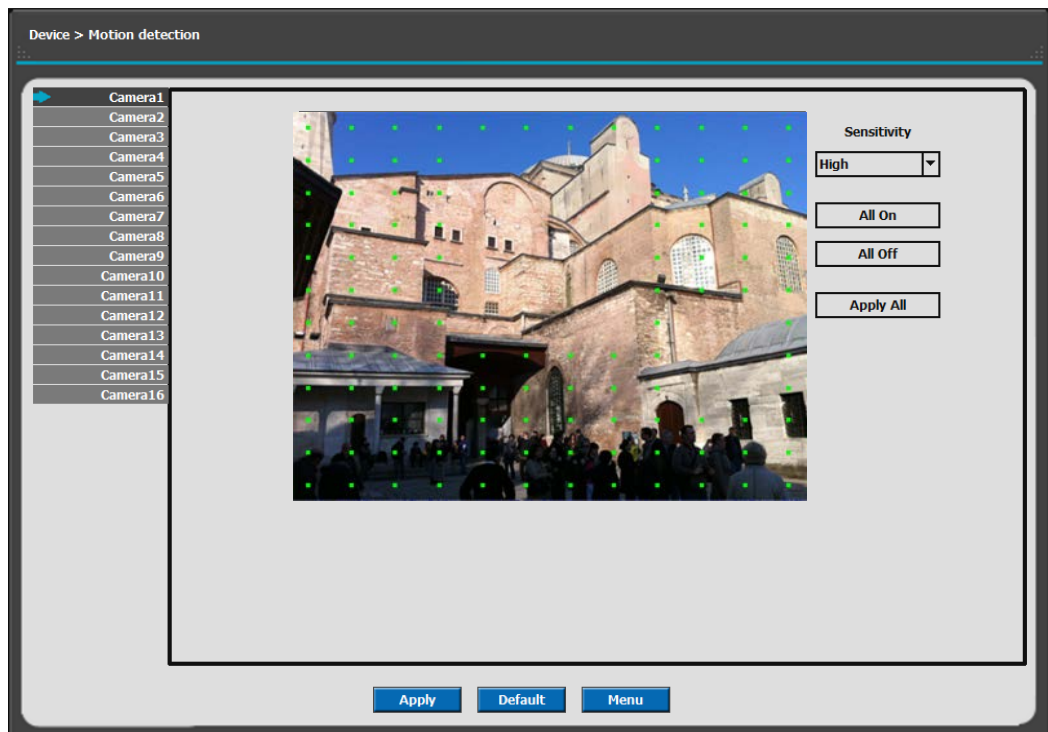

Sensitivity	Low, Mid, High
All On	This will activate the motion detection of the all area.
All Off	This will deactivate the motion detection of the all area.
Apply All	Apply the setting to whole channel

5) Alarm Out

- There are 4 types trigger such as sensor input, motion detection, POS and video loss. This setting is related that which trigger will be activate the action such as Relay, Popup, and Buzzer Alarm Out. Each type can have separate Duration value and also linked to selected camera.

5-1) Sensor Type

Selectable option is N.O. (Normally Open) / N.C. (Normally Close)

Device > Alarm out


Sensor Type	Type	Channel	Type	Channel
Sensor In	1 N.O	1	9 N.O	9
Motion detection	2 N.O	2	10 N.O	10
POS	3 N.O	3	11 N.O	11
VideoLoss	4 N.C	4	12 N.O	12
Duration	5 N.O	5	13 N.O	13
Name	6 N.O	6	14 N.O	14
	7 N.O	7	15 N.O	15
	8 N.O	8	16 N.O	16

Apply Default Menu

❖ For more details, refer to [CH 2. Installation Method and Cautions].(p.17)


5-2) Sensor In

- You can choose the action after sensor in between relay, buzzer sound and pop up. Also you can choose more than one action.

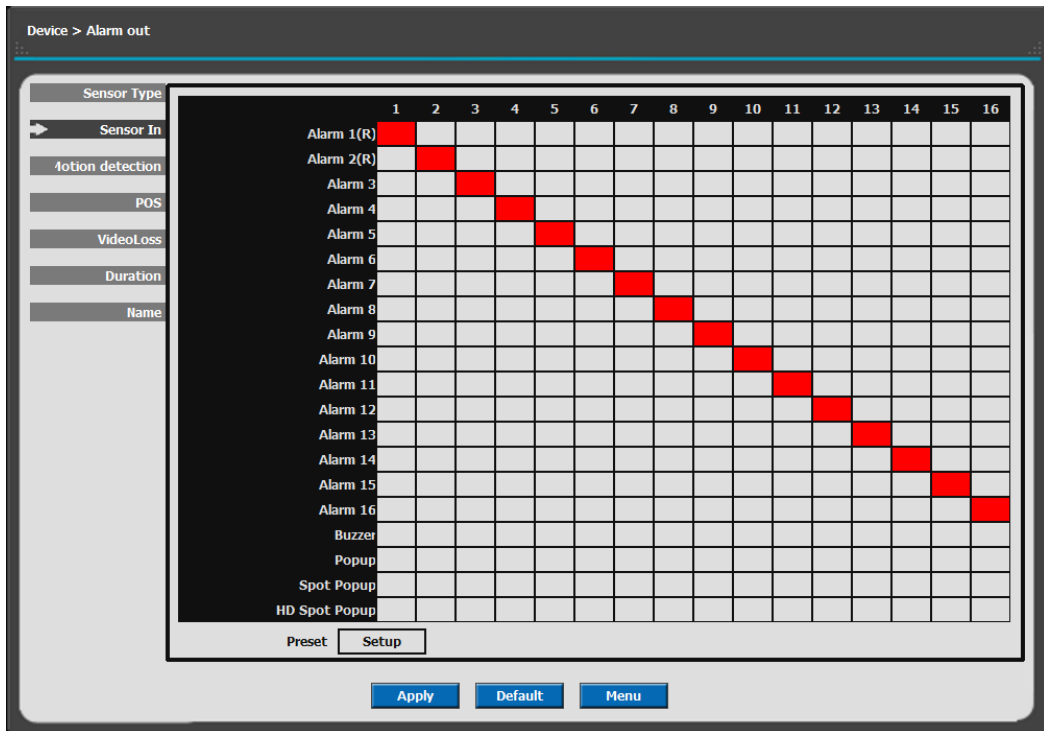

- Choose a sensor connected to a channel.
- If a sensor does not work, please check again the sensor type.
- Alarm 1,2 are relay out.


- Also you can choose more than one action. Furthermore you can set the preset position number by motion detection. If you push the 'setup' you can see the preset screen.

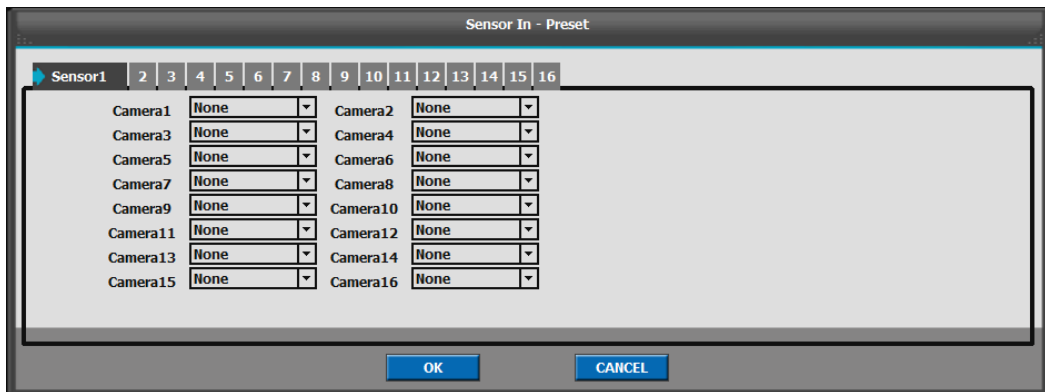


- You can assign the preset position individually by specific motion.

5-3) Motion Detection

- You can choose the action after motion detection between relay, buzzer sound and pop up.

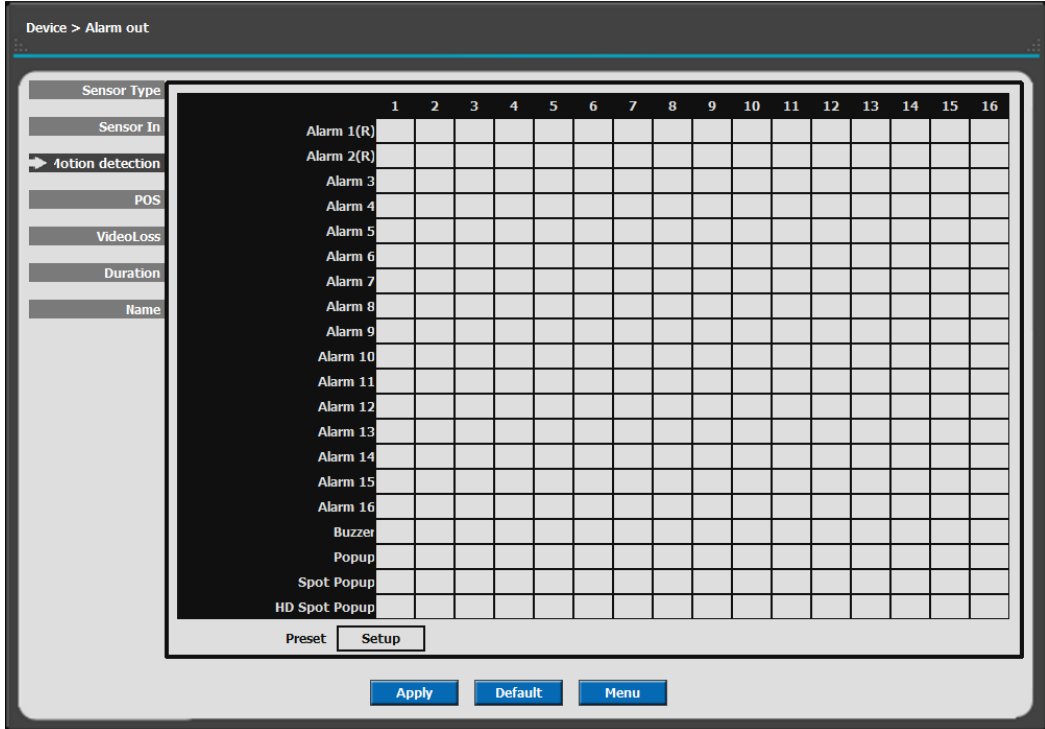


- Also you can choose more than one action. Furthermore you can set the preset position number by motion detection. If you push the 'setup' you can see the preset screen.

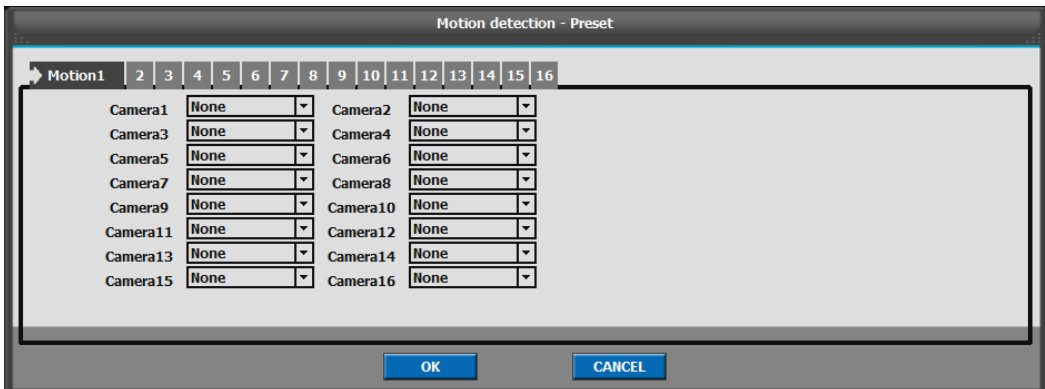

- You can assign the preset position individually by specific motion.

5-4) POS


- You can choose the action after POS transaction or video loss between relay, buzzer sound and pop up.

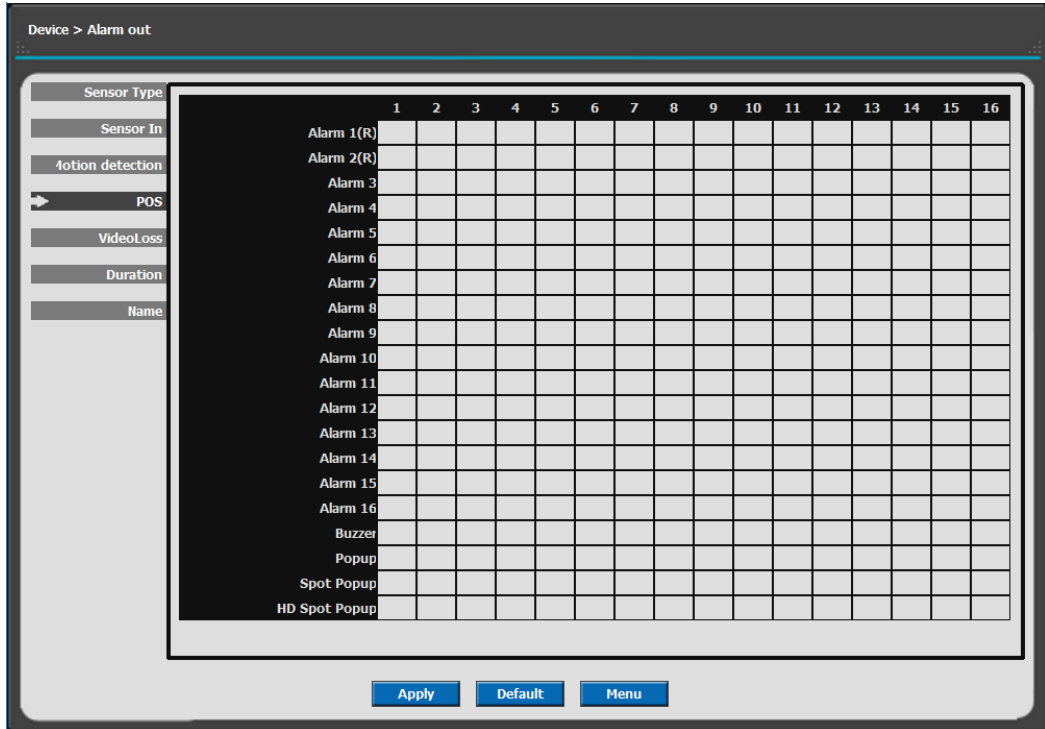

- Also you can choose more than one action.

5-5) Video Loss

- You can choose the action after motion detection between relay, buzzer sound, and pop up.

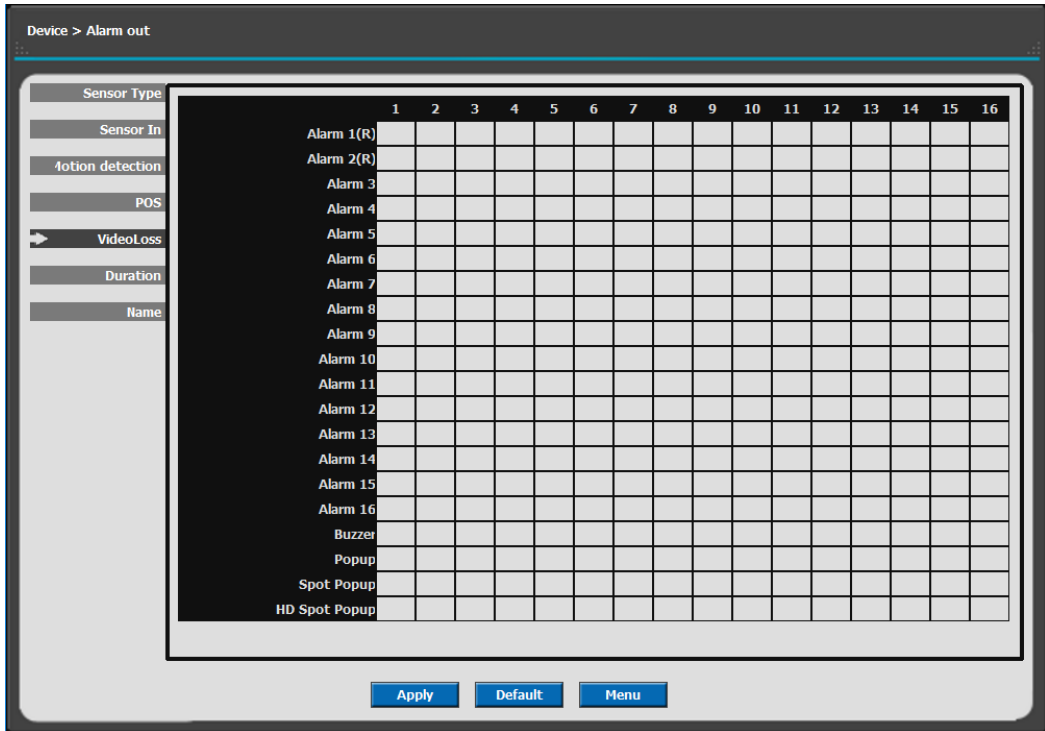

- Also you can choose more than one action.

5-6) Duration

- You can choose the duration time from 5 to 60 seconds after motion detection between relay, buzzer sound, pop up and preset.

Device > Alarm out

Sensor Type	
Sensor In	
Motion detection	
POS	
VideoLoss	
Duration	→
Name	

Alarm 1(R)	5 sec	▼
Alarm 2(R)	5 sec	▼
Alarm 3	5 sec	▼
Alarm 4	5 sec	▼
Alarm 5	5 sec	▼
Alarm 6	5 sec	▼
Alarm 7	5 sec	▼
Alarm 8	5 sec	▼
Alarm 9	5 sec	▼
Alarm 10	5 sec	▼
Alarm 11	5 sec	▼
Alarm 12	5 sec	▼
Alarm 13	5 sec	▼
Alarm 14	5 sec	▼
Alarm 15	5 sec	▼
Alarm 16	5 sec	▼
Buzzer	5 sec	▼
Popup	5 sec	▼
Spot Popup	5 sec	▼
HD Spot Popup	5 sec	▼
Preset	5 sec	▼

Apply Default Menu

5-7) Name

- You can set a name of the alarms.

Device > Alarm out


Sensor Type
Sensor In
Motion detection
POS
VideoLoss
Duration
Name

Alarm 1(R)	Alarm 1	Alarm 12	Alarm 12
Alarm 2(R)	Alarm 2	Alarm 13	Alarm 13
Alarm 3	Alarm 3	Alarm 14	Alarm 14
Alarm 4	Alarm 4	Alarm 15	Alarm 15
Alarm 5	Alarm 5	Alarm 16	Alarm 16
Alarm 6	Alarm 6		
Alarm 7	Alarm 7		
Alarm 8	Alarm 8		
Alarm 9	Alarm 9		
Alarm 10	Alarm 10		
Alarm 11	Alarm 11		

Apply Default Menu

6) PTZ

Configure Pan/Tilt/Zoom camera for control via DVR System and Remote client.

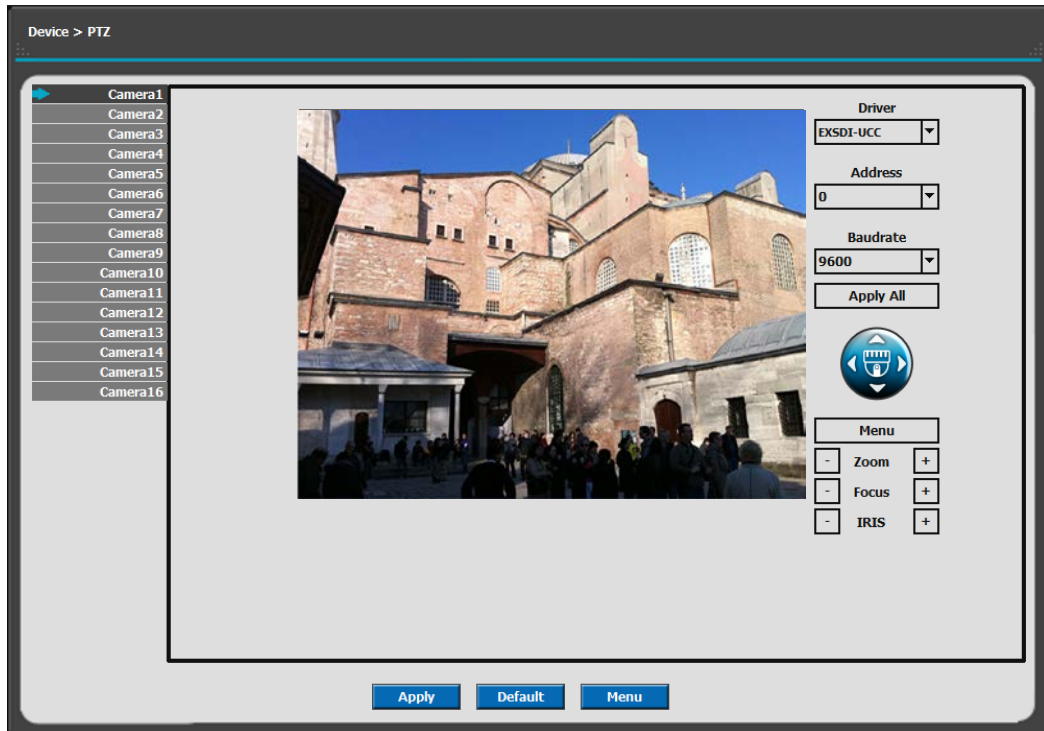

Driver	Choose Driver to be suitable for PAN/TILT Camera manufacturer.
Address	Choose address to be suitable for PAN/TILT Camera manufacturer.
Baudrate	Choose baudrate to be suitable for PAN/TILT Camera manufacturer.

- You have to set Comport value according to the connected camera.
- ❖ For connection of PAN/TILT Camera Receiver part, refer to user's manual of the related PAN/TILT Camera.

- ❖ There are more kinds of camera which can be supported. Please contact the tech support to want to know the other cameras.

Driver	Description
DMAX	RS485
DMAX-T	LAN (ONVIF)


7) Controller

This sets the ID of remote control. If you have many DVRs in the same place, you can control separately the DVR by different remote control ID.

❖ Remote controller ID setup

1. Choose Remote Controller ID you want to change.
2. Go to Live mode and press ALL button on remote controller.
3. Press the number you want to change.
4. Press SEL button on remote controller.

The ID should be the same between the DVR and remote control.

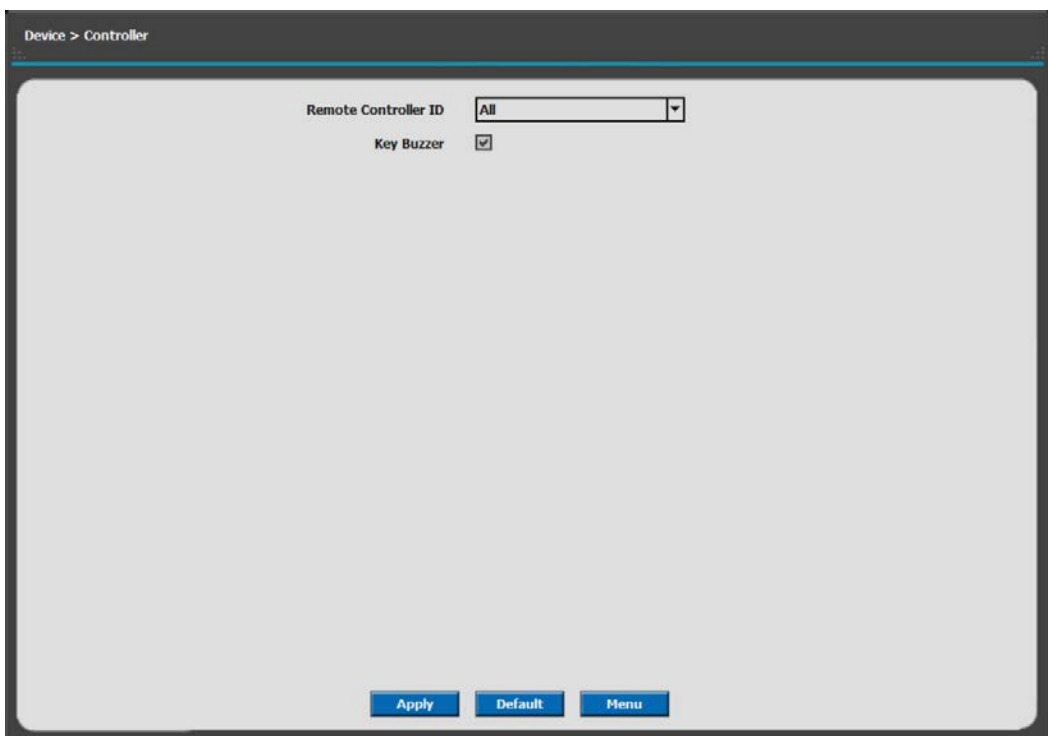


Remote Controller ID	All, 00 ~99
Key Buzzer	ON / OFF

8) POS

This sets the POS interface(text inserter) with the DVR and cash register.

※ If you are using a USB hub, you can use up to 4 USB POS.

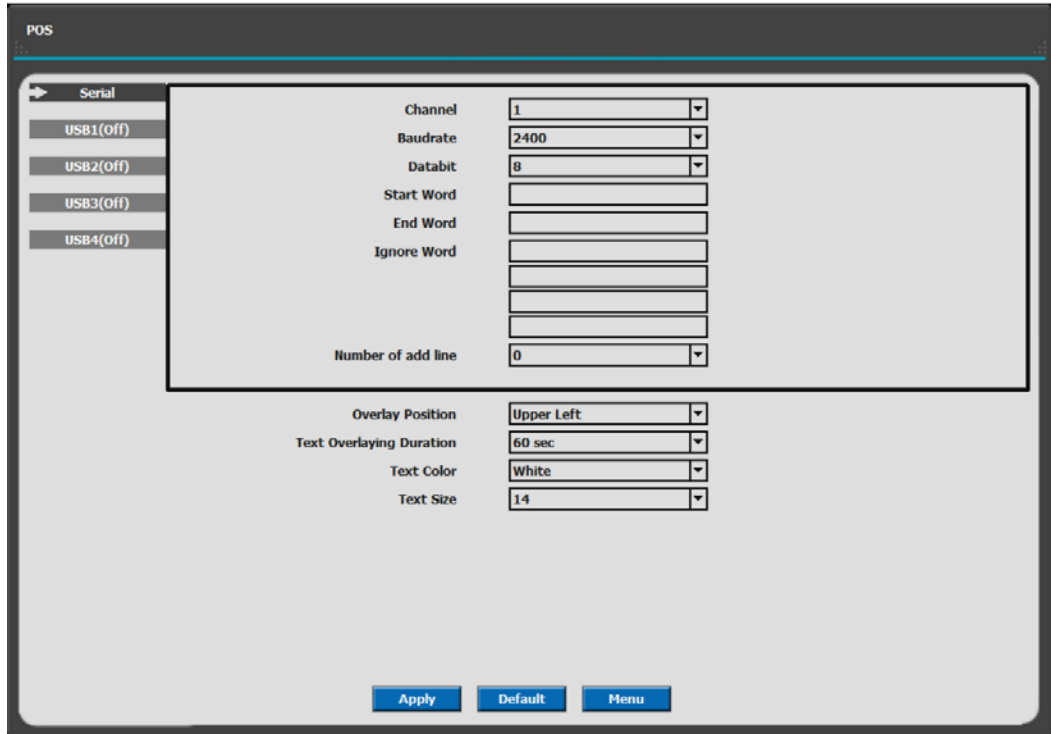


Channel	Select a Channel of POS
Baudrate	Select a baudrate of POS
Start Word	Type a start word of transaction
End Word	Type a end word of transaction. Text will be embedded into the picture between start word and end word.
Ignore Word	Type a word which you want ignore during text insertion.
Number of add line	This will determine the adding line after end word. (0~4)
Overlay Position	This will determine the text position.
Text Overlaying Duration	This will determine how long display the text up to 120 seconds. (60~120 sec)
Text Color	Select a text color.
Text Size	Select a text size.

❖ How to Connect POS

1. Connect RS232 or USB serial gender to RS232 serial cable between POS and DVR.



 *POS
RS232




*DVR
USB
RS232

2. To set manually, at first you should know the setting values of the POS. You can get the information from the POS setting screen.

Register	Info	Condition	Setting							ETC
Counter Setting	POS Setting	Place Setting	Receipt Setting							


Device Setup					
Device	Use	Part	Port	Protocol	
Barcode Scanner	No				
Receipt Printer	Yes	PR4RT	COM1	4800,8,n,1	
Cashbox	No				
Information	No				
Printer1	No				
Printer2	No				
Printer3	No				
Printer4	No				
Barcode Printer	No				
Terminal1	No				
Terminal2	No				
Terminal3	No				
Terminal4	No				
Telephone	No				
Save	Close				

3. If your setting is correct, you can see the below DVR screen on transaction. (This is the popup screen. You can set popup in the 'Event In' setup.)

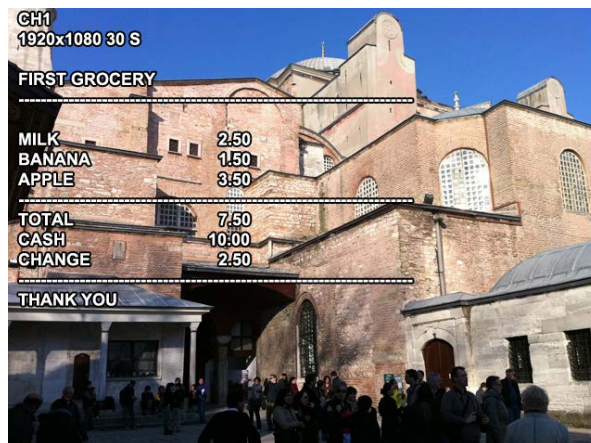

3-4-4. NETWORK

Configure and view Address, Port, DDNS, E-mail, Control and Status settings.

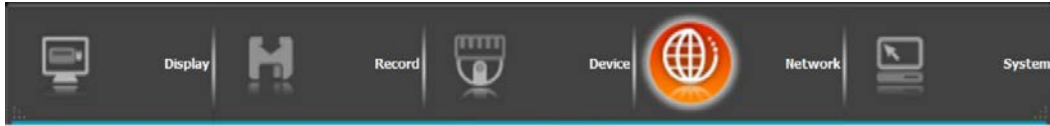

1) Address

Configure Network information for Remote client connection.

Network > Address

DVR Name:

MAC Address:

Type:

LAN

DHCP:

IP:

Subnet Mask:

Gateway:


DNS Auto:

DNS IP:

DVR Name	Type the URL of DVR using virtual keyboard.
Type	It can be supported only Ethernet.
DHCP (Dynamic Host Configuration Protocol)	Set whether you want to use DHCP or not (On/Off). If you connect LAN after setting it to On, IP is allocated automatically. If you set it to Off, you have to input IP. DHCP is a protocol that allows managers to manage and allocate IP address centrally.
IP	Type the IP address.
Subnet Mask	Type the subnet mask.
Gateway	Type a gateway.
DNS Auto	If you connect LAN after setting it to On, DNS IP is allocated automatically. If you set it to Off, you have to input DNS IP.
DNS IP	Type the DNS IP.

2) Magic IP

Magic IP is our P2P service, which enables network access simply by using a smartphone to scan the supplied product QR code.

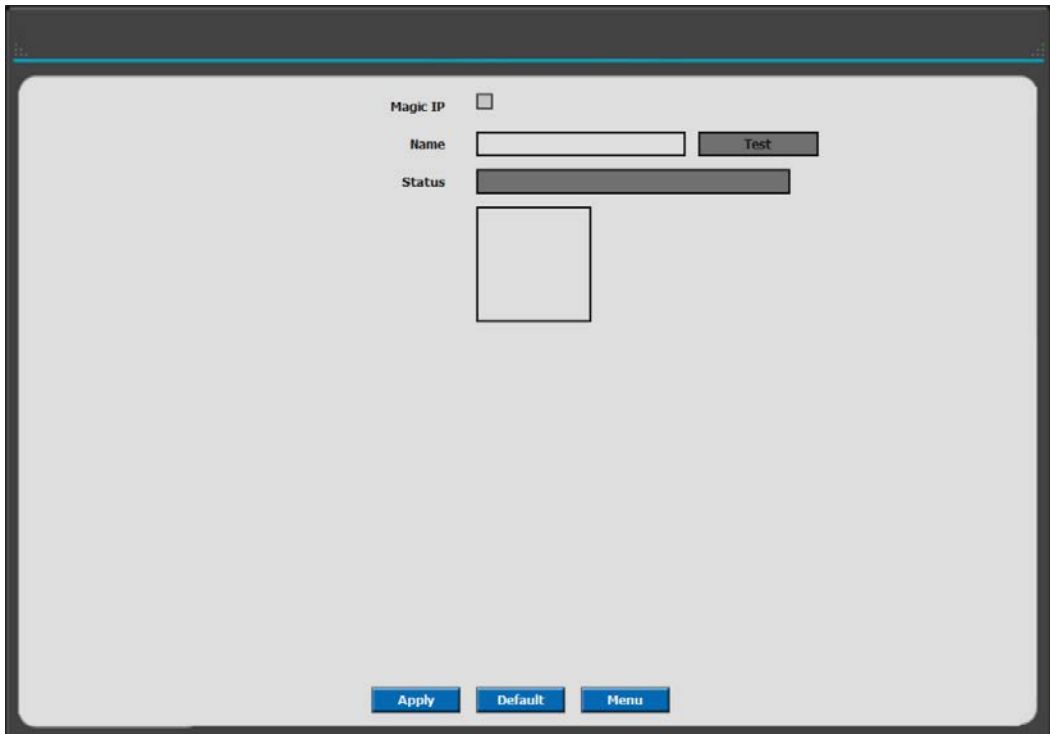

The screenshot shows a configuration window for Magic IP. At the top left, there is a checkbox labeled "Magic IP" which is currently unchecked. Below this, there is a "Name" field with an empty text input box and a "Test" button to its right. Underneath the "Name" field is a "Status" field with a greyed-out text input box. Below the "Status" field is a large empty square box, likely intended for a QR code. At the bottom of the window, there are three blue buttons: "Apply", "Default", and "Menu".

❖ Magic IP setup

1. Check Magic IP.
2. Make your own ID for P2P.
3. The ID must contain at least 8 characters.
4. When the test is done and succeed, it's QR code is automatically created.

*Small letters, numbers and special characters('-', '_') only available.

3) Port

There are ports for the case such as watch, search, setup, web, RTSP and ONVIF.

You can individually set the port number of the DVR

If you activate 'uPNP (Universal plug and play)' box, DVR connects the router automatically with these port number. You don't have to setup the router.

The screenshot shows the 'Network > Port' configuration page. It contains the following fields and controls:

- Watch: Input field with value 9996, range (1000-40000)
- Search: Input field with value 9996, range (1000-40000)
- Setup: Input field with value 9996, range (1000-40000)
- Web: Input field with value 80, range (80,1000-40000)
- RTSP: Input field with value 554, range (554,1000-40000)
- ONVIF: Input field with value 994, range (994,1000-40000)
- uPNP: Unchecked checkbox
- uPNP Test: Button
- Status: Empty input field
- Apply, Default, Menu: Buttons at the bottom

Watch	Type the port. (8000~9999)
Search	Type the port. (8000~9999)
Setup	Type the port. (8000~9999)
Web	Type the port. (8000~9999)
RTSP	Type the port. (8000~9999)
ONVIF	Type the port. (8000~9999)
uPNP	ON / OFF
uPNP Test	Test uPNP
Status	It shows the test result of uPNP.

4) DDNS

This is the function to automatically change the IP of DVR to URL. This product supports the automatic DDNS service using manufacture's internal server. Also you can choose DynDNS.

DDNS Type	Choose a DDNS type.
DDNS Server	Defend on the DDNS type, it will be auto-typed or disable.
Port	Defend on the DDNS type, it will be auto-typed or disable
Domain name	Type the port of the email account.
ID	Defend on the DDNS type, it will be auto-typed or type the ID of your DDNS.
DDNS Password	type the DDNS password.
Duration	choose the time sync frequency with DDNS server.
DDNS Test	Test your DDNS.


5) E-mail

You can send the event with snapshot by email. Fill all the information correctly and push the 'Email Test'. Also you can select each event individually by 'Event Set'.

Receptor	Type the email address of the receptor.
Sender	Type the name of the sender.
SMTP Server	Type the SMTP server of the email account.
Port	Type the port of the email account.
Authentication	Set whether you want to use authentication or not (On/Off).
SSL	Set whether you want to use SSL or not (On/Off).
Account	Type the email account of the sender.
Password	Type the password of the send's email account.
Duration	Set the duration time to send continuous mails.
E-mail Test	Test the email account.
❖ Event Set	Set events
❖ Snapshot Set	Set snapshot

❖ **Event Set**


Set events to send the email.

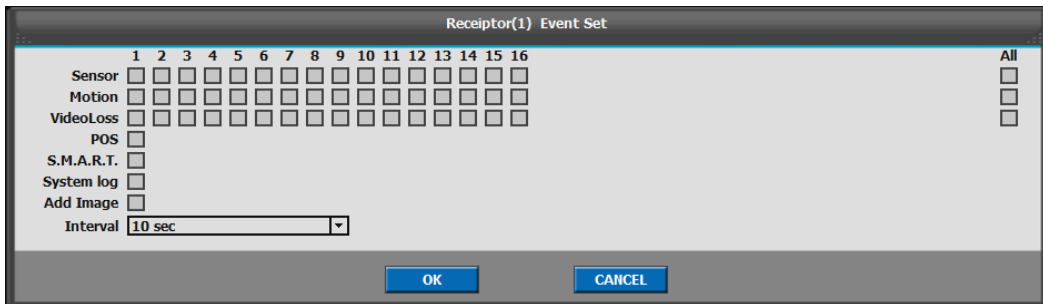

Sensor	Detect a sensor input.
Motion	Detect a motion detection.
Video Loss	Detect a video loss.
POS	Send inserted text of POS to the email.
S.M.A.R.T.	Send checked HDD S.M.A.R.T result to the email.
System log	Send system log to the email.
Add Image	Send a snapshot of events to the email.
Interval	Ignore as much time for event processing.


❖ **Snapshot Set**

Set the regular hour for snapshot to send the email.

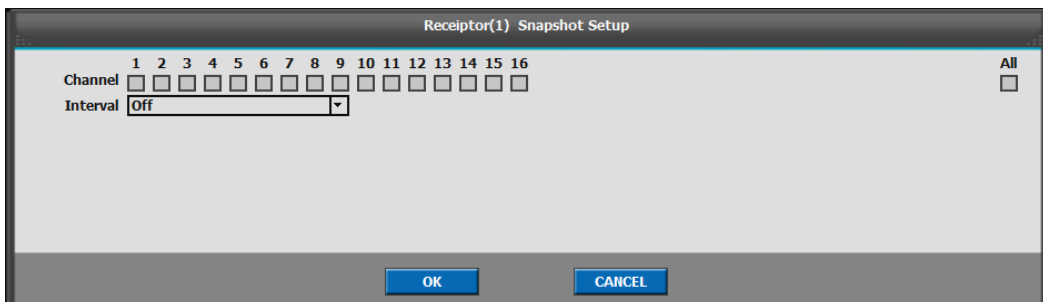

6) Streaming


Set a streaming for network connection.

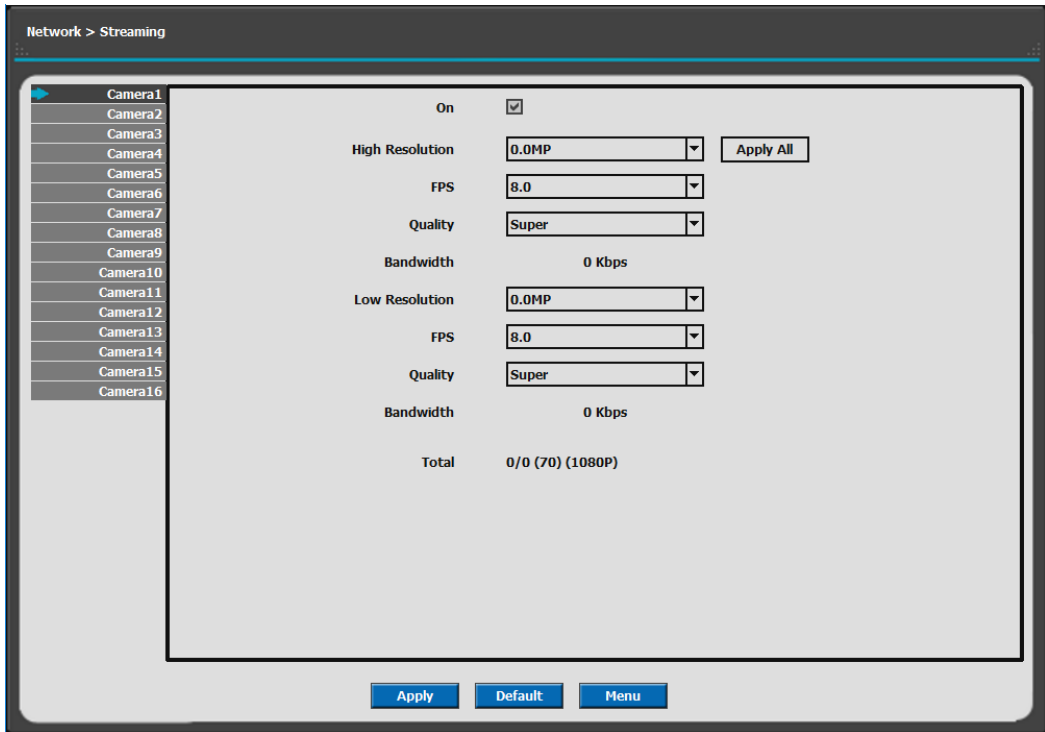

On	Set whether you want to use the channel on Network or not (On/Off).
High Resolution	Display high resolution of the IPC.
FPS	Display FPS of the High Resolution of the IPC.
Quality	Display picture quality.(Super, High, Med, Low)
Low Resolution	Display low resolution of the IPC.
FPS	Display FPS of the low Resolution of the IPC.
Quality	Display picture quality.(Super, High, Med, Low)
Bandwidth	It shows the video transmission.


7) Status

This shows the information how many connections and what is the action of each connection.

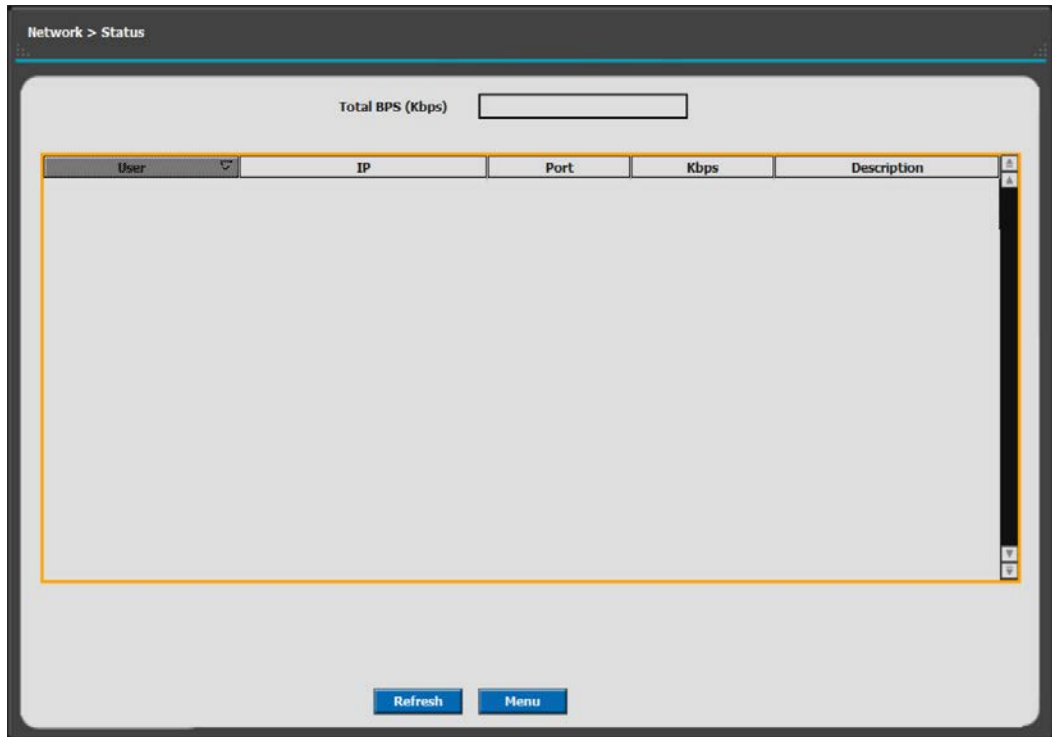


3-4-5. SYSTEM

Configure and view system Date/Time, User Authority, Storage, System Log and Configuration settings

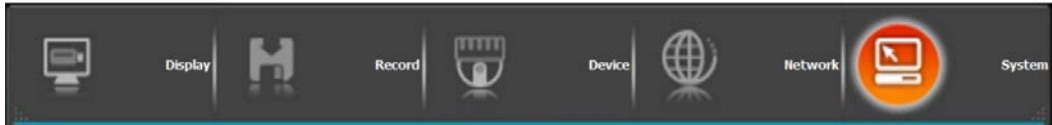


1) Date/Time

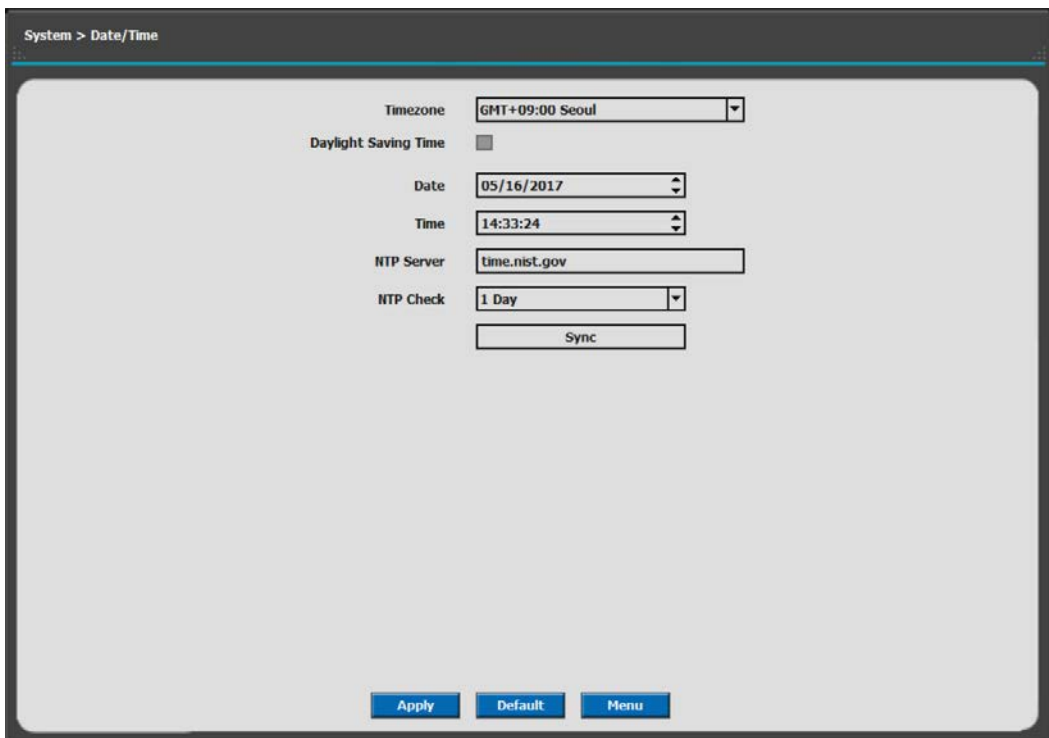

Timezone	Choose the time zone of your site. If you using the NTP function, it must be set correctly to your zone.
Daylight Saving Time	It enables to adapt the day light saving time automatically.
Date / Time	This sets product time. Input time by pressing number buttons after moving cursor with direction buttons.
NTP (Network Time Protocol) Server	This function is to change the time of DVR automatically via network.
NTP Check	choose the time sync frequency.
Sync	Sync the time and NTP.

2) User Authority


This sets User authority individually. You can give to each users the authorities such as setup, search, backup, PTZ, network and camera control.

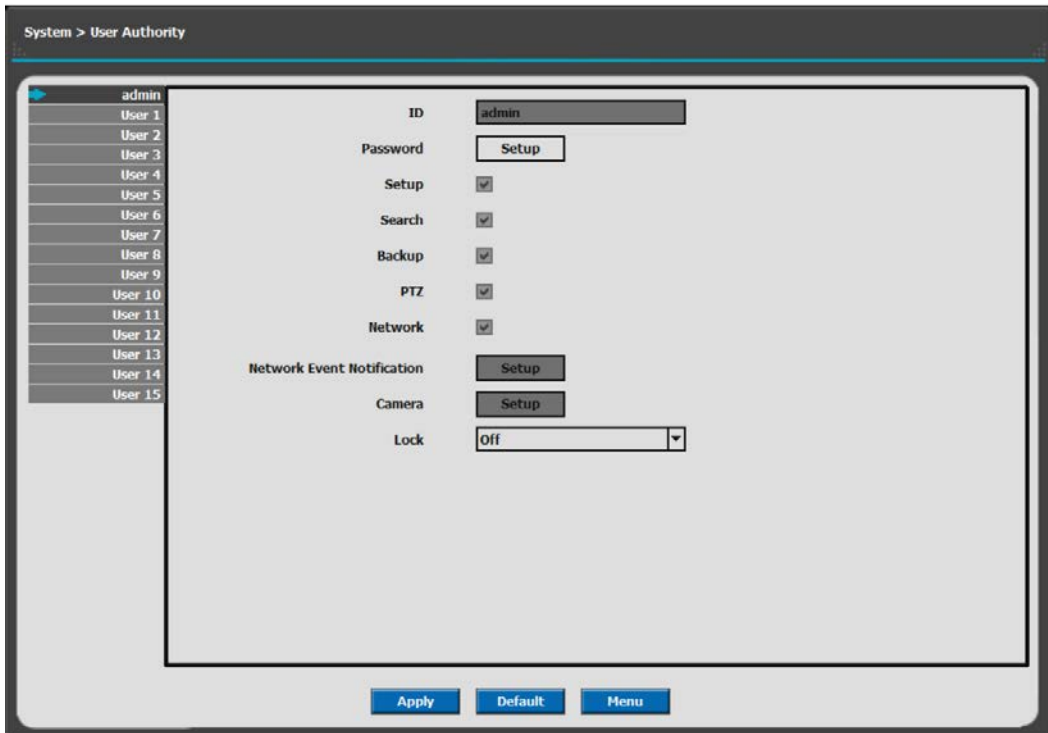

ID	Type an ID.
Password	Type a password.
Setup	Authorizes the setting of the system.
Search	Authorizing the search of the system.
Backup	Authorizing backup of the system.
PTZ	Authorizing PTZ of the system.
Network	Authorizing network of the system.
Network Event Notification	Authorizing a network event notification.
Camera	Authorizing a camera.
Lock	select the auto-lock time.(Off, 1~10 min)

3) Storage


Display the information and usage of the hard disk drives.

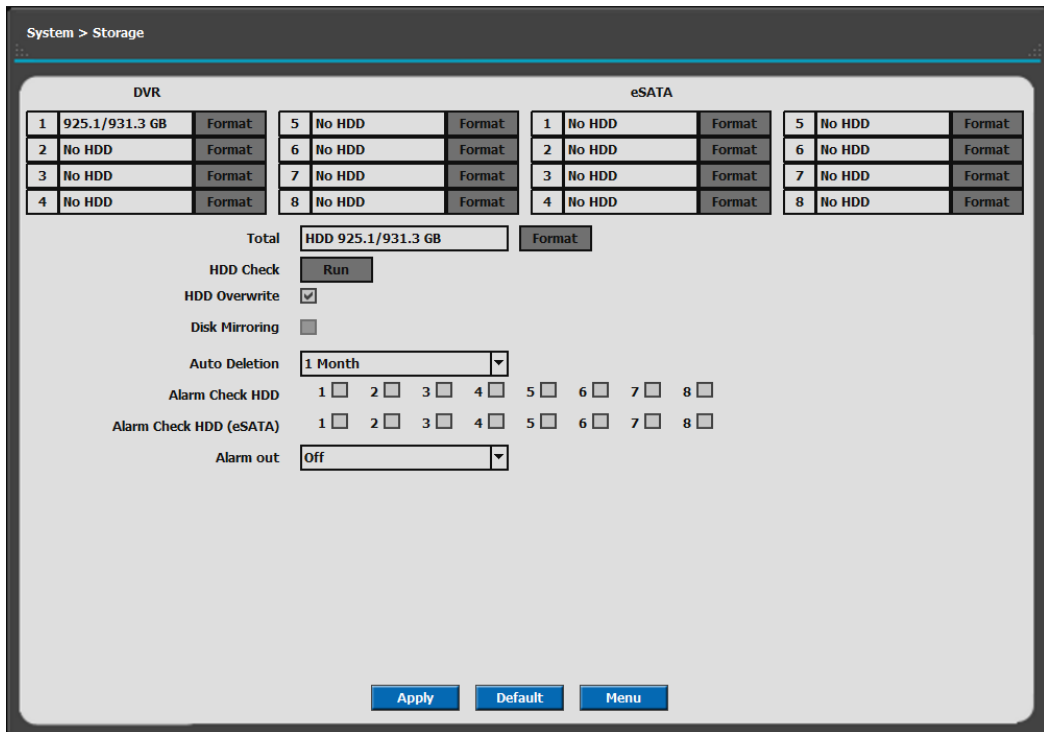

Total	Display the HDD usage being used for the product. If you press the 'Enter' button on here, all the hard disk drives will be formatted.
HDD Check	Check the HDD.
HDD Overwrite	Determine whether you want to continue recording if there is no spare saving space at hard disk drives.
Auto Deletion	You can select the holding period of the data. If you choose 'OFF', the DVR keep the maximum data regarding the HDD capacity.
Alarm Check HDD	There is an alarm if there is no HDD or no format. It is useful to check the HDD absence.
Alarm out	You can choose Buzzer or Relay.

4) S.M.A.R.T :Self-Monitoring Analysis and Reporting Technology


This function lets you probe the hard disk drives and investigate the status of the drivers automatically.

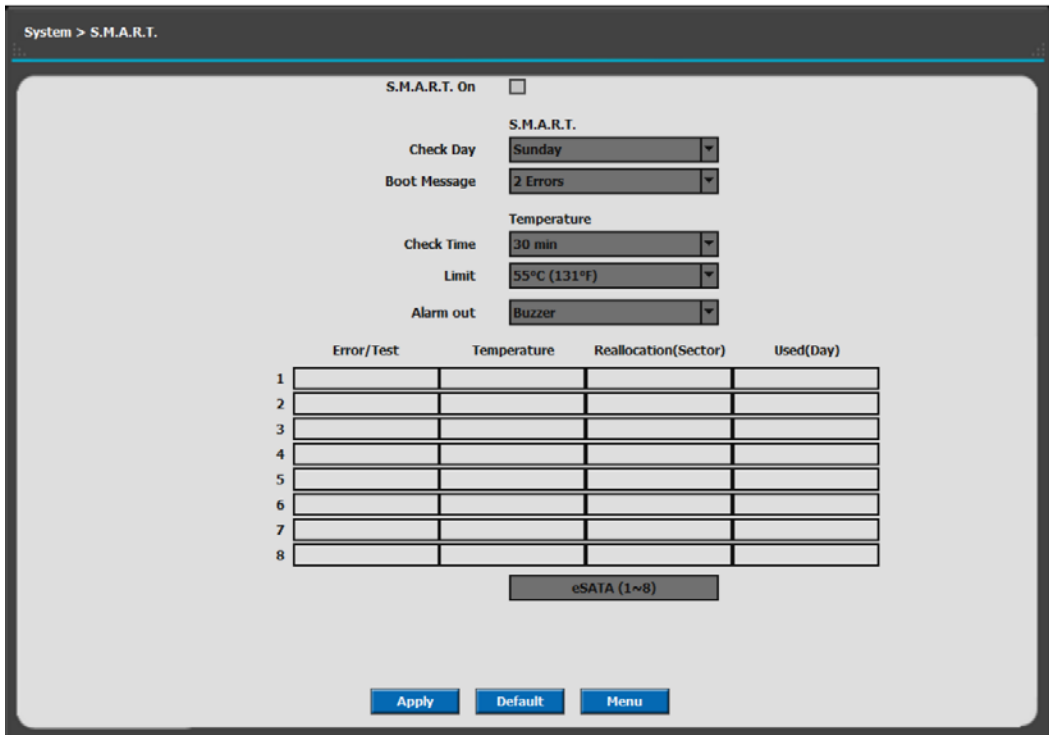

S.M.A.R.T.	
S.M.A.R.T. On	Set whether you want to use S.M.A.R.T. or not (On/Off).
Check Day	Determine the date to perform the S.M.A.R.T.
Boot Message	The number of message of showing the errors.
Temperature	
Check Time	Temperature check period.
Limit	The upper tolerance of the hard disk drive temperature.
Alarm out	You can choose Buzzer or Relay

5) System Log


You may view all System administration log from Setup → System → System Log. Also you can export the system log and easily send it to technical support for trouble shooting.

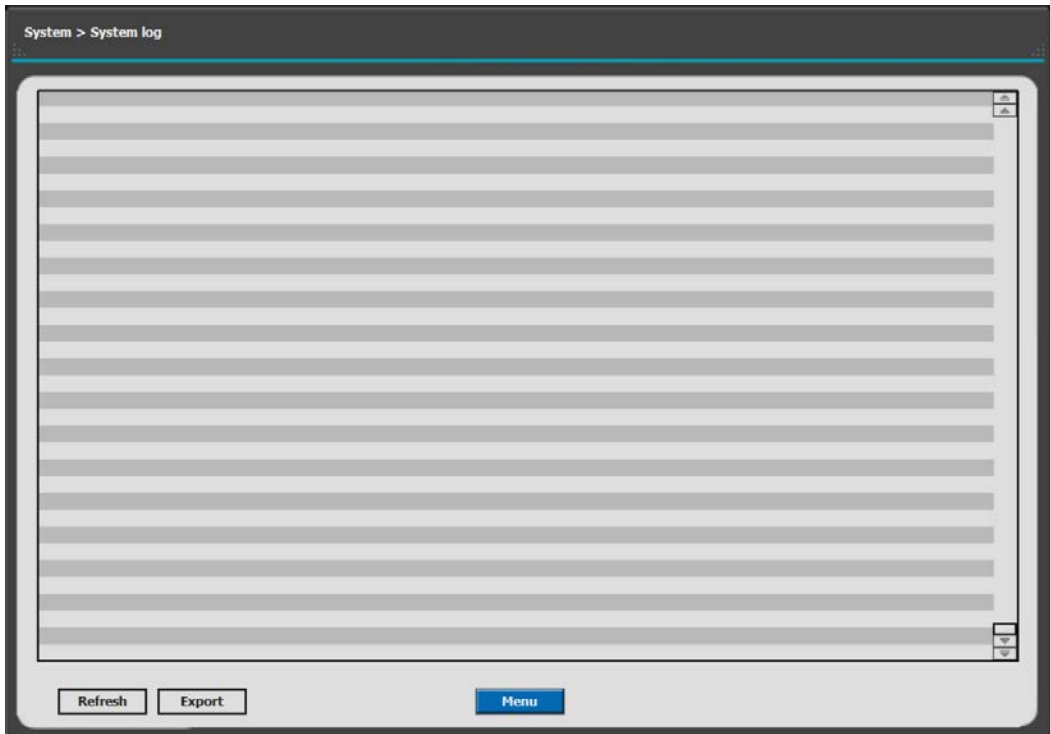

Refresh	Refresh the system log.
Export	Export the system log.

6) Configuration

Shown at the following screen, from Setup → System → Firmware, you may view the current firmware version as well as Upgrade the firmware and additionally, Export, Import, and Default DVR Configuration.

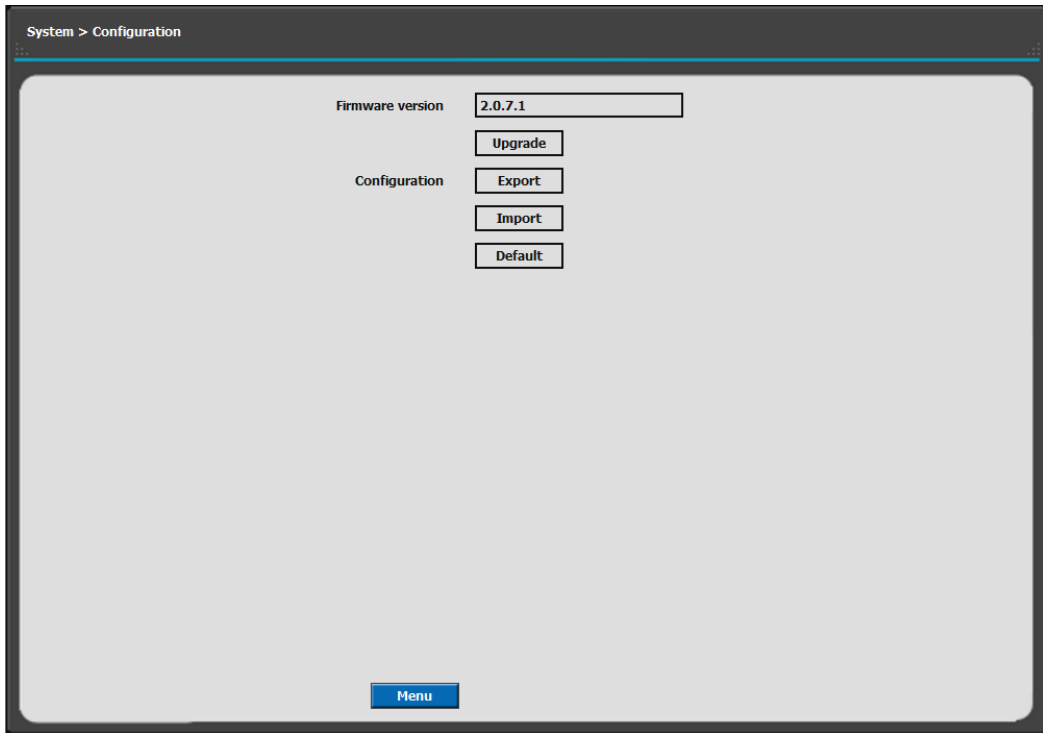



Firmware version	Show the firmware version.
Upgrade	Upgrade the firmware.
Export	Export system settings.
Import	Import system settings.
Default	Return to factory default settings.

You should connect correctly the USB devices, before you use firmware upgrade, export and import.


3-5. Firmware Upgrade

If you want to upgrade, please follow that;

1. Download the latest firmware to USB memory root directory.
2. Put this memory to USB slot of DVR.
3. Choose 'Upgrade' and you can see the below screen will appear.
4. Select the desired file, then choose 'OK'.

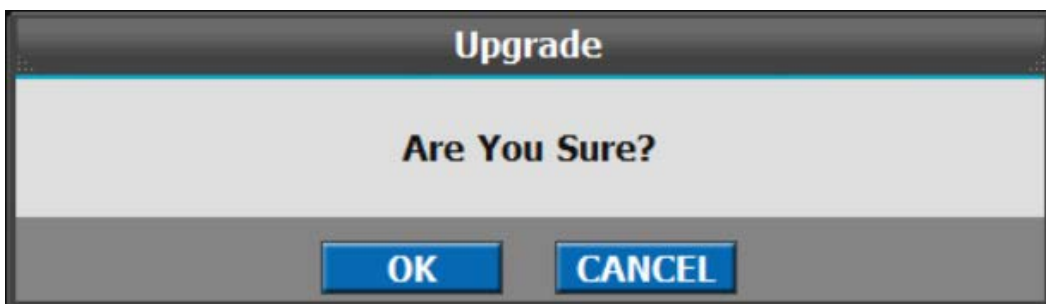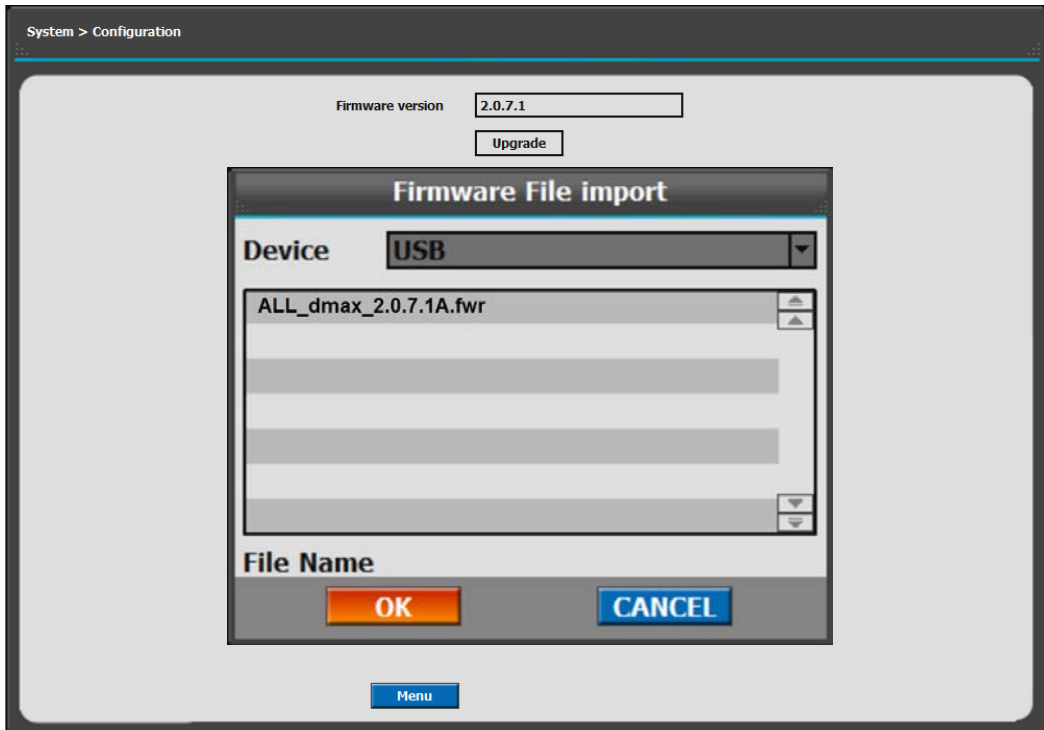

If you choose OK, you can see the below download window on the DVR screen.

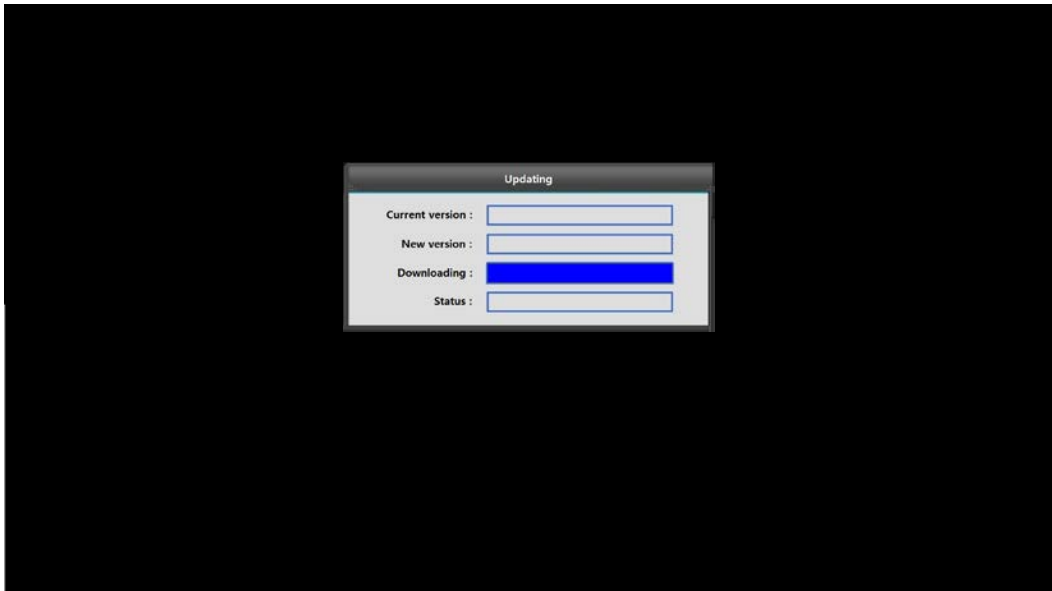

 **WARNING!!!**

Do not turn off the power during download procedure. If you power off manually, all memory will be deleted !

※ After upgrading, DVR will reboot automatically. Before rebooting, do not operate manually !

Trouble Shooting

Symptom	Checkpoint	Countermeasure
<ul style="list-style-type: none"> ● Can't turn on power. 	<ul style="list-style-type: none"> ● Is DVR connected to power supply cable? 	<ul style="list-style-type: none"> ● Connect power cable
<ul style="list-style-type: none"> ● There is no image on monitor 	<ul style="list-style-type: none"> ● Are DVR and monitor turned on? ● Are cables of DVR connected?. 	<ul style="list-style-type: none"> ● Turn on power. ● Connect DVR cable.
<ul style="list-style-type: none"> ● Only INFO OSD is on monitor and no image 	<ul style="list-style-type: none"> ● Is camera turned on? ● Are cables of DVR and monitor connected? 	<ul style="list-style-type: none"> ● Turn on camera. ● Connect cables of DVR and monitor.
<ul style="list-style-type: none"> ● There is Video Loss message. 	<ul style="list-style-type: none"> ● Is NTSC/PAL setting normal? ● Is connection between DVR and camera normal? 	<ul style="list-style-type: none"> ● Check whether NTSC/PAL setting is SETUP properly ● Check whether DVR and camera are connected properly
<ul style="list-style-type: none"> ● Can't search with Client Program. 	<ul style="list-style-type: none"> ● Isn't another user using same IP? 	<ul style="list-style-type: none"> ● Use it after another use finishes using it. If another user is searching DVR remotely with same IP, you can not search.
<ul style="list-style-type: none"> ● Motion Detection doesn't work well 	<ul style="list-style-type: none"> ● Isn't it too bright or too dark? 	<ul style="list-style-type: none"> ● Increase Motion Detection sensitivity. ● Install camera closer.
<ul style="list-style-type: none"> ● There are differences between Live screen and actual condition during remote monitoring 	<ul style="list-style-type: none"> ● Isn't camera installed too far away? 	<ul style="list-style-type: none"> ● Since it buffers Live images, there might be changes with actual condition. (1~2 sec)
<ul style="list-style-type: none"> ● Live doesn't work well in remote monitoring 	<ul style="list-style-type: none"> ● Is it set to True Color? ● Are PC specifications and VGA Card specifications are appropriate? 	<ul style="list-style-type: none"> ● Refer to recommended Client PC specifications in 4-1 Installing Client Program?