

IEC-3501E-05 / 3502E-05

 
INFRARED EMITTER

Information and Installation Guide

A. : Description


1. Oval shape, with elegant & compact size
2. Infrared is built in transparent housing
3. With 10 feet cable length
4. Color coding wires with 3.5mm mono standard plug
5. With self-adhesive tape for quick and easy fixing on any hard, clean & dry surface
6. IR transmitting range: 2 feet for the distance of between LED's facing to the sensors in a line of sight and IR transmitting angle: up to 1 feet for +/- 45 degrees off axis, depending on remote strength and ambient interference.

B. : Diagram

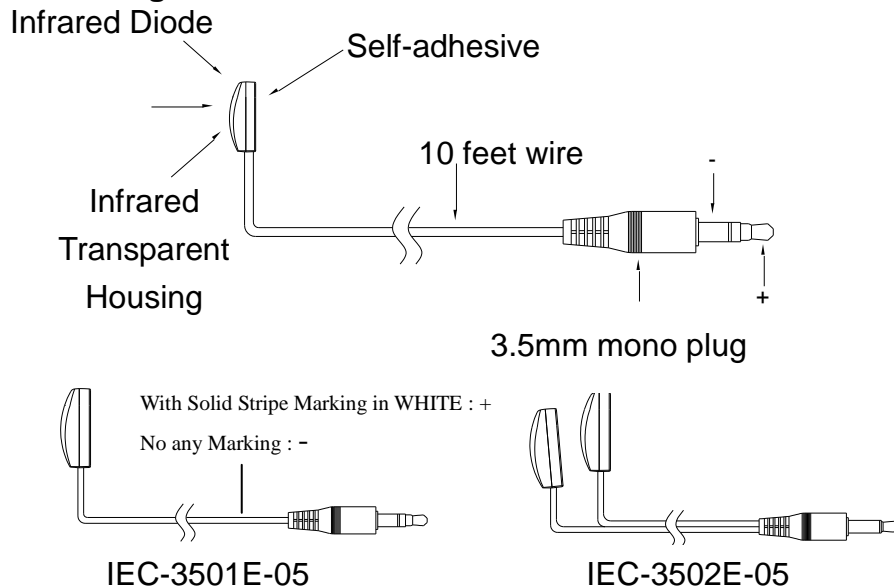


C. : Installation

 Standard installation

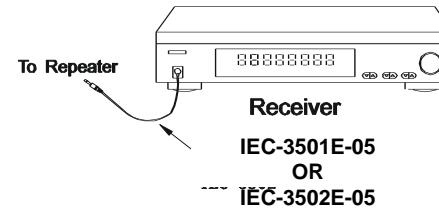


1. IR emitter (flat side) attached directly to IR sensor window
2. More reliable activated
3. Looks nice

 Attach IR emitter at inside of shelf

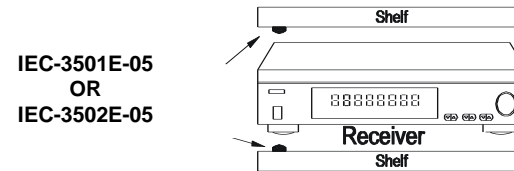

1. Attach IR emitter on above or below of the IR window
2. Less reliable activated

 Cabinet With door Installation

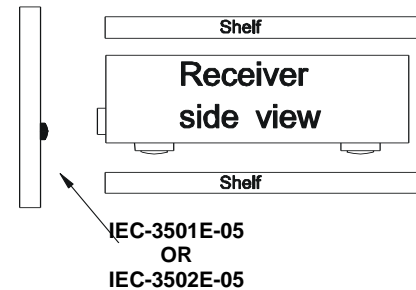

1. IR emitter is attached to rack door, round shape side facing the IR window
2. Less reliable activated

D. : Note:

1. Make sure mounting surface are clean and dry for fixed well
2. You cannot connect the IR emitter directly to a power supplies or battery