


Ball head to flat head adapter (for EH630)



1 Disassemble the EH630.



2 Loose the locking screw of the ball by hexagon wrench.

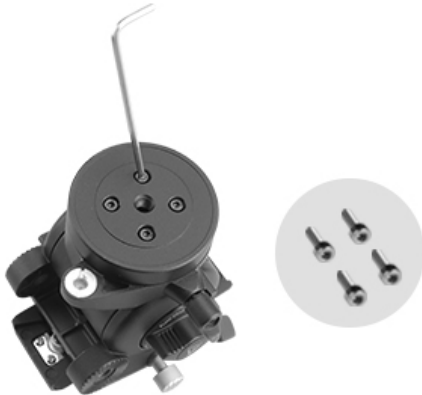

3 Tighten the screw of 710P by hexagon wrench to the base of head.



4 Finish.
Change the ball head to flat head by adding adapter 710P.